

Grand Piano Pro



SOUND LIST

Rev. 01.Feb.2026

V3 SOUND

Grand Piano & Upright Piano Bank MSB 0

Prg.				PDR / Decay	SR	N-O	FX	V
0	Grand Piano	BÖS 270	Classic	✓adjustable	✓	✓	✓	4
1	Grand Piano	STE Mod. D	Classic	✓adjustable	✓	✓	✓	4
2	Grand Piano	YAM C4	Classic	✓adjustable	✓	✓	✓	4
3	Upright Piano	SCH K132	Classic	✓adjustable	✓	✓	✓	4
4	Grand Piano	BÖS 270	Pop			✓	✓	2
5	Grand Piano	STE Mod. D	Pop			✓	✓	2
6	Grand Piano	YAM C4	Pop			✓	✓	2
7	Upright Piano	SCH K132	Pop			✓	✓	2
8	Grand Piano	BÖS 270	Rock Attack			✓		5
9	Grand Piano	STE Mod. D	Rock Attack			✓		5
10	Grand Piano	YAM C4	Rock Attack			✓		5
11	Upright Piano	SCH K132	Rock Attack			✓		5

Prg.				PDR	SR	N-O	FX	V
12	Grand Piano	BÖS 270	Dream	allways on				4
13	Grand Piano	STE Mod. D	Latin Octave					4
14	Grand Piano	YAM C4	Dream	allways on				4
15	Upright Piano	SCH K132	Dream	allways on				4
16	Grand Piano	BÖS 270	+ Soft Pad					4
17	Grand Piano	STE Mod. D	+ Soft Pad					4
18	Grand Piano	YAM C4	+ Soft Pad					4
19	Upright Piano	SCH K132	+ Soft Pad					4
20	Grand Piano	BÖS 270	Cinematic soft		✓	✓	✓	4
21	Grand Piano	STE Mod. D	Cinematic soft	✓adjustable	✓	✓	✓	4
22	Grand Piano	YAM C4	Cinematic soft	✓adjustable	✓	✓	✓	4
23	Upright Piano	SCH K132	Cinematic soft	✓adjustable	✓	✓	✓	4

Prg.				PDR	SR	N-O	FX	V
24	Upright Piano	SCH K132	Felt	✓	✓	✓	✓	4
25	Upright Piano	SCH K132	Felt			✓	✓	2

Electric Grand Pianos

Prg.				PDR / Decay	SR	N-O	FX	V
26	Electric Grand	CP70	Standard			✓		2
27	Electric Grand	CP70	Tremolo			✓		2
28	Electric Grand	CP70	Pedal Down Reso.	✓adjustable		✓		4
29	Electric Grand	CP70	+ Soft Pad					4
30	Electric Grand	CP70	Dream	allways on		✓		4
31	Electric Grand	CP80	Standard			✓		4
32	Electric Grand	CP80	Tremolo			✓		2
33	Electric Grand	CP80	Pedal Down Reso.	✓adjustable		✓		4
34	Electric Grand	CP80	+ Soft Pad					4
35	Electric Grand	CP80	Dream	allways on				4
36	Electric Grand	CP70 + CP80	Standard			✓		3
37	Electric Grand	CP70 + CP80	Tremolo			✓		3
38	Electric Grand	CP70 + CP80	Pedal Down Reso.	✓adjustable		✓		5
39	Electric Grand	CP70 + CP80	PDR Tremolo	✓adjustable		✓		5
40	Electric Grand	CP70 + CP80	Dream	allways on		✓		3

Piano Modelling Algorithm

PRD / Decay

Pedal Down String Resonance ✓adjustable using the Decay parameter

The PRD volume can be adjusted over time using the Decay parameter.

The value 64 is the quietest value, 127 is the loudest value, and the sound then corresponds to MSB 1 same Prg. number.

SR

Sympathetic Resonance: passive string resonance.

You can adjust the volume in our App.

N-O

Note-Off samples: Created with note velocity and length.

Only on Acoustic Pianos - **You can adjust the volume in our App.**

FX

Pedal down noise: Pedal down noise, Frame open effect and Hammer release.

You can adjust the volume in our App.

V

Voicer takes per note from polyphony.

fixed

String resonance – pedal down - is always active.

Half pedal function: Use a controller pedal, like ROLAND® DP-10, to vary the sustain lengths.

E-Piano Tine

Bank MSB 0

Prg.				N-O	V
41	E-Piano	MK1 1975	Classic	✓	2
42	E-Piano	MK1 1975	Tremolo	✓	2
43	E-Piano	MK1 1975	+ FM Layer		5
44	E-Piano	MK1 1975	+ Soft Pad		3
45	E-Piano	MK2 1984	Classic	✓	2
46	E-Piano	MK2 1984	Tremolo	✓	2
47	E-Piano	MK2 1984	+ FM Layer		5
48	E-Piano	MK2 1984	+ OB Pad		3
49	E-Piano	DYNO 1979	Classic	✓	2
50	E-Piano	DYNO 1979	Tremolo	✓	2
51	E-Piano	DYNO 1979	Tremolo fast	✓	2
52	E-Piano	DYNO 1979	+ MK1 1985	✓	3
53	E-Piano	MK1 1975Q	Bell Version		1
54	E-Piano	MK1 1975Q	+ Note-off Bells	✓	2

E-Piano Reed

Prg.				N-O	V
55	E-Piano	A200	Standard	✓	2
56	E-Piano	A200	Tremolo	✓	2
57	E-Piano	W140B	Standard	✓	2
58	E-Piano	W140B	Tremolo	✓	2

E-Piano FM

Prg.				N-O	V
59	E-Piano	FM 1	Standard		2
60	E-Piano	FM 1	Tremolo		2
61	E-Piano	FM 5	Standard		2
62	E-Piano	FM 5	Tremolo		2
63	E-Piano	FM 7	Standard		3
64	E-Piano	FM 7	Tremolo		3
65	E-Piano	FM 7	+ Soft Pad		5

Bell Tone

Prg.			N-O	V
66	Bell Tone			1

Stringed

67	Clavinet D6		✓	2
----	-------------	--	---	---

Strings

68	Ensemble			2
----	----------	--	--	---

Synthesizer

69	Synth Bell			2
70	Synth Pad 1	M12		2
71	Synth Pad 2	OB		2
72	Synth Pad 3	OB		2
73	Synth Pad 4	DIGI		2
74	Synth Poly	MKS70		2
75	Synth P5 Brass	P5		2
76	Synth Digital	WAVE		2
77	Synth rass	MKS70		2

Organs

78	Organ 776555678 slow		2
79	Organ 776555678 fast		2
80	Organ 800000568 slow		2
81	Organ 800000568 fast		2
82	Organ 008530000 slow		2
83	Organ 008530000 fast		2
84	Organ 800000000 slow		2
85	Organ 800000000 fast		2
86	Organ 807800000 slow		2
87	Organ 807800000 fast		2

Organs

Prg.		V
88	Organ 888 perc slow	2
89	C3 Full	2
90	Classic Pipe Organ Combi Funds	2
91	Classic Pipe Organ Tutti	2

Various

92	Choir Ooh	2
93	Choir Ahh Classic	2
94	Accordion	2
95	Nylon Guitar	2

Tuned Instruments

96	Xylophone	2
97	Marimba	2
98	Glockenspiel	2
99	Vibraphone	2
100	Celeste	2
101	Timpani	2

Brass & Saxophone

102	Flute	2
103	Tenor Sax Jazz	2
104	Brass Section	4

Bass

105	E-Bass	2
106	Jazz Bass	2
107	Synth Bass	2

Pianos Bank MSB 0

Prg.				PDR / Decay	SR	NO	FX	V
108	Grand Piano	BÖS 270	Classic Soft Curve	✓adjustable	✓	✓	✓	4
109	Grand Piano	BÖS 270	Live Resonance	✓adjustable	✓	✓	✓	4
110	Grand Piano	BÖS 270	simple					2
111	Grand Piano	BÖS 270	+ Strings					4
112	Grand Piano	BÖS 270	+ Digi Atk.			✓		5
113	Grand Piano	BÖS 270	Cine + Digi Attack			✓		2
114	Grand Piano	STE Mod. D	Classic Soft	✓adjustable	✓	✓	✓	4
115	Grand Piano	STE Mod. D	Live Resonance	✓adjustable	✓	✓	✓	4
116	Grand Piano	STE Mod. D	simple					2
117	Grand Piano	STE Mod. D	+ Strings					4
118	Grand Piano	STE Mod. D	+ Bell			✓		5
119	Grand Piano	STE Mod. D	Cine + DynoTrem.			✓		2
120	Grand Piano	YAM C4	Standard Mapping	✓adjustable	✓	✓	✓	4
121	Grand Piano	YAM C4	Live Resonance	✓adjustable	✓	✓	✓	4
122	Grand Piano	YAM C4	simple					2
123	Grand Piano	YAM C4	+ Strings					4
124	Grand Piano	YAM C4	+ Digi Attack	✓		✓		5
125	Grand Piano	YAM C4	Cinematic + Digi	✓		✓		2

Grand Pianos Adjust layer Pedal Down Reso Maximal fixed Bank MSB 1

Prg.			adjust	PDR / Decay	SR	NO	FX	V
0	Grand Piano	BÖS 270	Max. Pedal Down	✓Max.Vol	✓	✓	✓	4
1	Grand Piano	STE Mod. D	Max. Pedal Down	✓Max.Vol	✓	✓	✓	4
2	Grand Piano	YAM C4	Max. Pedal Down	✓Max.Vol	✓	✓	✓	4

Grand Pianos Adjust layer with MIDI controller 58 Bank MSB 1

Prg.			adjust	PDR	SR	NO	FX	V
16	Grand Piano	BÖS 270	+ Pad cc58					4
111	Grand Piano	BÖS 270	+ Strings cc58					4
17	Grand Piano	STE Mod. D	+ Pad cc58					4
117	Grand Piano	STE Mod. D	+ Strings cc58					4
18	Grand Piano	YAM C4	+ Pad cc58					4
123	Grand Piano	YAM C4	+ Strings cc58					4

Orchestra Perc. Bank MSB 0

Prg.	
126	Orchestra Percussion

Orchestra Perc. Mapping

Nr.	Orchestra	Nr.	Orchestra
C 24	Gong	68	Tubular Bell
25		A 69	Tubular Bell
D 26	Gong	70	Tubular Bell
27	Gong	71	Tubular Bell
E 28		C 72	Tubular Bell
F 29	Gong		Tubular Bell
30		D 74	Tubular Bell
G 31	Concert Cy. op.		Tubular Bell
32		E 76	Tubular Bell
A 33	Concert Cy.	F 77	Tubular Bell
34			Tubular Bell
35	Gran Casa	G 79	Tubular Bell
C 36	Gran Casa		Tubular Bell
37		A 81	Tubular Bell
D 38	Concert Sn. roll		Tubular Bell
39			Tubular Bell
E 40	Concert Sn.	C 84	Tubular Bell
F 41	Concert Sn.		Tubular Bell
42	Timpani	D 86	Tubular Bell
G 43	Timpani		Tubular Bell
44	Timpani	E 88	Tubular Bell
A 45	Timpani	F 89	Tubular Bell
46	Timpani		Tubular Bell
47	Timpani	G 91	Tubular Bell
C 48	Timpani		Tubular Bell
49	Timpani	A 93	Tubular Bell
D 50	Timpani		Tubular Bell
51	Timpani		Castanet
E 52	Timpani	C 96	Castanet
F 53	Timpani		
54	Timpani	D	Triangle open
G 55	Timpani		
56	Timpani	E	Triangle short
A 57	Timpani	F	Wind. dwn.
58	Timpani		
59	Timpani	G	Wind. up
C 60	Timpani		
61	Timpani	A	Tamburin
D 62	Timpani		
63	Timpani		Tamburin
E 64	Timpani	C	Thai Gong
F 65	Timpani		
66	Timpani		
G 67	Timpani		

Drum Kit channel 10

Prg.	
0	Standard Kit

Nr.	Pop	Nr.	Pop
C 12		42	Hi-Hat Closed
13	Surdo Mute	G 43	Low Tom
D 14	Surdo Open	44	Hi-Hat Pedal
15	Hi Q	A 45	Medium Low
E 16	Whip Slap	46	Hi-Hat Open
F 17	Scratch H	47	Mid Tom
18	Scratch L	C 48	Mid Tom High
G 19	Finger snap	49	Crash Cymbal 1
20	Click Noise	D 50	High Tom
A 21	Metronom Click	51	Ride Cymbal 1
22	Metronom Bell	E 52	Chinese Cymbal
23	Seq Click L	F 53	Ride Cup
C 24	Seq Click H	54	Tambourine
25	Brush Tap	G 55	Splash Cymbal
D 26	Brush Swirl	56	Cowbell
27	Brush Slap	A 57	Crash Cymbal 2
E 28	Brush Tap Swirl	58	Vibraslap
F 29	Snare Roll	59	Ride Cymbal 2
30	Castanet	C 72	Whistle L
G 31	Snare Soft	73	Guero Short
32	Sticks	D 74	Guero Long
A 33	Kick Soft	75	Claves
34	Open Rim Shot	E 76	Wood Block H
35	Kick Tight	F 77	Wood Block L
C 36	Kick	78	Cuica Mute
37	Side Stick	G 79	Cuica Open
D 38	Snare	80	Triangle Mute
39	Hand Clap	A 81	Triangle Open
E 40	Snare Tight	82	Shaker
F 41	Floor Tom	83	Jingle Bells
		C 84	Bell Tree

MIDI IMPLEMENTATION

	Recognized	
Basic Default	1 - 16	
Mode	3 poly mode	
Messages		
Note number	* 19-108	* depends on sounds
Note OFF	9nH,v=0 x	
Key aftertouch	o	
Channel aftertouch	o	
Pitch Bend	0-12	
Bank Select	00	
Controller	01 - Modulation	
	05 - Portamento time	
	06 - Data Entry	
	07 - Volume	
	10 - Panorama	
	11 - Expression	
	56 - Note-off Pianos	
	57- Hammer off	
	58 - Piano Frame FX	
	64 - Sustain	
	65 - Portamento	
	66 - Sostenuto	
	71 - Filter resonance	
	72 - ENVELOPE Release	
	73 - ENVELOPE Attack	
	74 - Filter cutoff	
	75 - ENVELOPE Decay	
	76 - Vibrato rate	
	77 - Vibrato depth	
	78 - Vibrato delay	

MIDI IMPLEMENTATION

	84 - Portamento control	
	91 - Reverb send	
	93 - Chorus send	
	120 - All sound off	
	121 - Reset all controllers	
	123 - All note off	
	126 - Mono-mode (as special version)	
	127 - Poly-mode	
RPN 0000H	BnH 65H 00H 64H 00H 06H vv	Pitch bend sensitive in semitone (default=2)
RPN 0001H Fine tune in cent	BnH 65H 00H 64H 01H 06H vv	vv=00 -100 vv=40H 0 vv=7FH +100
RPN 0002H Coarse tune half tone	BnH 65H 00H 64H 02H 06H vv	vv=00 -64 vv=40H 0 vv=7FH +64
NRPN 3754H	BnH 63H 37H 62H 54 06H vv	Sympathetic ON/OFF
NRPN 3755H	BnH 63H 37H 62H 55 06H vv	Sympathetic Level
Program Change :	0-127	0-127
System Exclusive:		
SYSEX	F0H 7EH 7FH 09H 01H F7H	General MIDI Reset
SYSEX	F0H 7FH 7FH 04H 01H 00H 0H F7H	Master volume (l=0 to 127, default 127)
SYSEX DSP1	F0h,41h,00h,42h,12h,40h,7Fh,7Fh,xxh,00h,F7h xxh=Effeht 01h=HALL2 02h=ROOM1 03h=ROOM2 04h=ROOM3" 00h=HALL1 06h=PLATE2 07h=PLATE3 08h=CHORUS 09h=FLANGE 0Ah=DELAY1 0Bh=DELAY2 0Ch=CHORUS/ROOM1 0Dh=CHORUS/ROOM2 0Eh=VOCAL CANCEL 0Fh=ROTARY SPEAKER	
SYSEX DSP2	F0h,41h,00h,42h,12h,40h,01h,38h,xxh,00h,F7h	xxh=Effeht 01h=CHORUS 1 01h=CHORUS 2 02h=CHORUS 3 03h=CHORUS 4 04h=FEEDBACK 05h=FLANGER 06h=SHORT DELAY 07h=FB DELAY

www.v3sound.com