

Sonority Pro



SOUND LIST

Rev. 1.2025

V3 SOUND

Safety precautions

SAFETY INSTRUCTIONS

- Read the user manual before using the device
- Do not allow any liquid to come in contact with the device
- Do not place anything on top of the device
- Do not handle the power supply with wet hands
- Turn off all connected devices before you connect any new devices

Do not use or store the device where it is exposed to:

- dampness or wetness
- extreme temperature changes (i.e. do not store in a vehicle in winter)
- strong vibrations or jolts



HANDLING

- Use only the original cables and power supply
- Remove the cable only by pulling on the plug, not on the cable
- Do not expose the power adapter to any mechanical stress

CUSTOMER SERVICE

Do not carry out any repairs at home, as this may result in permanent damage to the electronics. Any guarantee claims are no longer valid in this case.

ACCESSORIES

Manual and power

POWER REQUIREMENT

9VDC / 1.0A

HUMIDITY

max. 80%, non-condensing

OPERATING TEMPERATURE

10 to 40 degrees Celsius

Copyright

All the audio recordings V3SOUND uses on the sound boards are protected by copyright. V3SOUND alone has been given the right by all musicians involved to use this material. Any duplication, editing or any other copy of individual sounds by or given to a third party in any form (audio sampling CD, data storage device with individual sounds, download of any file, etc.) is strictly forbidden.

Copyright © 2025 V3SOUND - Austria

Specification

- Master Volume
- Master Reverb
- 4 GB flash memory
- 16 MIDI channels
- 1 audio out stereo balanced
- Polyphony 256 voice
- Port available for 1 sustain foot pedal
- Dimensions: 12cm (L) x 12cm (W) x 6cm (H)
- Weight: 0.2 kg
- USB Host



The CE certification is available at <http://www.v3sound.com/support/>



This product conforms to the FCC 47 CFR PART 15 SUBPART B

V3SOUND GMBH
Archenweg 1i - 6114 Kolsass - Austria - Europe

Legende

HPF	High Pass Filter
BPF	Band Pass Filter
LPF	Low Pass Filter
(1)	DRUM MAP - Exklusive mode
(1)	DRUM MAP - Exclusive mode - one note give sound
velo.	Velocity split
Slide	Velocity zone 116-127 Slide up version
Silence	no Sound

User Interface und Anschlüsse



General MIDI

Bank MSB 0



0	Grand Piano
1	Bright Piano
2	Electric Grand Piano
3	Honky Tonk
4	E-Piano Tines
5	E-Piano FM
6	Harpichord
7	Clavinet
8	Celesta
9	Glockenspiel
10	Music Box
11	Vibraphon
12	Marimba
13	Xylophon
14	Tubular Bell
15	Dulcimer
16	Drawbar Organ
17	Percussive Organ
18	Rock Organ
19	Church Organ
20	Reed Organ
21	Accordion
22	Harmonica
23	Accordion Tango
24	Nylon Guitar
25	Acoustic Steel
26	Jazz Guitar
27	Guitar clean
28	Guitar mute clean
29	Overdrive Guitar
30	Distortion Guitar
31	Guitar harmonics

32	Upright Jazz Bass
33	E-Bass fingered
34	E-Bass picked
35	Fretless Bass
36	Slap Bass 1
37	Slap Bass 2
38	Synth Bass 1
39	Synth Bass 2
40	Violin
41	Viola
42	Cello
43	Contrabass
44	Tremolo Strings
45	Pizzicato Strings
46	Harp
47	Timpani
48	String Ensemble 1
49	String Ensemble 2
50	Synth Strings 1
51	Synth Strings 2
52	Choir Aahs
53	Voice Dohs
54	Synth Voice
55	Orchestra Hit
56	Trumpet
57	Trombone
58	Tuba
59	Trp. Mute
60	Horn
61	Brass Section
62	Synth Brass 1
63	Synth Brass 2

General MIDI

Bank MSB 0

64	Sopran Sax
65	Alto Sax
66	Tenor Sax
67	Bariton Sax
68	Oboe
69	English Horn
70	Bassoon
71	Clarinet
72	Piccolo
73	Flute
74	Recorder
75	Pan Flute
76	Blown Bottle
77	Shakuhachi
78	Whistle
79	Ocarina
80	Square Lead
81	Saw Lead
82	Calliope
83	Chiffer Lead
84	Charang
85	Solo Vox
86	5th Saw wave
87	Bass & Lead
88	New Age
89	Warm Pad
90	Polysynth
91	Choir pad
92	Bowed
93	Metallic
94	Halo pad
95	Sweep

96	Rain
97	Soundtrack 5th
98	Crystal
99	Atmosphere
100	Brightness
101	Goblins
102	Echoes
103	Sci-fi Star
104	Sitar
105	Banjo
106	Shamisen
107	Koto
108	Kalimba
109	Bag pipe
110	Fiddle
111	Shanai
112	Tinkle Bell
113	Agogo
114	Steel Drums
115	Woodblock
116	Taiko Drum
117	Melodic Tom
118	Synth Drum
119	Reverse Cymbal
120	Guitar Noise
121	Breath Noise
122	Seashore
123	Bird
124	Telephon
125	Helicopter
126	Applaus
127	Gunshot

Piano Bank MSB 1

Prg.		
00	Grand Piano Vienna	
02	Rock Piano Vienna	
04	Classic Grand Piano Vienna	
06	Honky Tonk	
07	Grand Latin Octave Vienna	
08	Upright Piano Vienna	
09	Grand Piano Vienna	Layered EP-FM
10	Grand Piano & E-Grand Rock	Layered MKS & CP Attack
11	Grand Piano Vienna	Layered Pad
12	Grand Piano Vienna	Layered Strings
20	Grand Piano Hamburg	
22	Rock Piano Hamburg	
24	Grand Latin Octave Hamburg	
25	Grand Piano Hamburg	Layered Strings
26	Grand Piano Hamburg	Layered Pad
127	Silence - no sound	

E-Piano Bank MSB 2

Prg.		
0	Electric Grand	
1	Electric Grand & Mic. Attack	
2	Electric Grand MKS	MKS & Grand
3	Electric Grand Mic. Attack	curved velocity - layer this sound
4	E-Piano MK1 Classic	
5	E-Piano MK1 Classic	soft
6	E-Piano MK1 Classic	Layered MKS
7	E-Piano MK1 Classic	Tremolo 1
8	E-Piano MK1 Classic	Layered Bell
9	E-Piano MK1 Classic	Layered EP-FM
10	E-Piano MK1 Classic	Layered Pad
11	E-Piano V3 Bella	
12	E-Piano V3 Bella	Note-off 1 Octave up
13	E-Piano V3 Bella	Layered Cortales
14	E-Piano V3 Bella	Layered Pad
15	E-Piano Wurl. A200	
16	E-Piano Wurl. A200	Tremolo 1
17	E-Piano Wurl. A200	Tremolo 2

E-Piano Bank MSB 2

Prg.		
18	E-Piano DX Classic	
19	E-Piano FM	
20	E-Piano FM	Layered Bell
21	E-Piano FM	Filter
22	E-Piano FM	Note-off
23	E-Piano FM	Layered MKS
24	E-Piano FM	Tremolo 1
25	E-Piano FM	Tremolo 2
26	E-Piano FM	Layered Bell
27	E-Piano FM	Layered Bell & Pad
127	Silence - no sound	

Organ

Prg.		
0	Organ 776555678 slow	slow Rotary
1	Organ 776555678 fast	fast Rotary
2	Organ 800000568 slow	slow Rotary
3	Organ 800000568 fast	fast Rotary
4	Organ 008530000 slow	slow Rotary
5	Organ 008530000 fast	fast Rotary
6	Organ 800000000 slow	slow Rotary
7	Organ 800000000 fast	fast Rotary
8	Organ 807800000 slow	slow Rotary
9	Organ 807800000 fast	fast Rotary
10	Organ 804708000 slow	slow Rotary
11	Organ 804708000 fast	fast Rotary
12	Organ 800008000 slow	slow Rotary
13	Organ 800008000 fast	fast Rotary
14	Organ 800000008 slow	slow Rotary
15	Organ 800000008 fast	fast Rotary
16	Organ 687600000 slow	slow Rotary
17	Organ 687600000 fast	fast Rotary
18	Organ 888 perc slow	
19	Rock Organ	
20	Ham Full	
21	Ham L100 Retro KW1	
22	Ham L100 Retro KW2	
23	German Organ DB slow	
24	German Organ DB fast	
25	German Organ FL slow	
26	German Organ FL fast	
27	Version UK	

Organ

Bank MSB 3

Prg.		
28	Theatre Organ Mighty Tower	
29	Theatre Organ + Xylophone Reiteration	
30	Theatre Organ + Glocken Reiteration	
37	Theatre Organ Pedal Bass	
38	Organ House	
39	Combo Retro Vibrato 1	
40	Combo Retro Vibrato 2	
41	Classic Organ Tutti 1	
42	Classic Organ Tutti 2	
43	Classic Organ Pipe Flute	
44	Classic Organ Pipe Combi	
45	Classic Organ Pedal Flute 16	
126	Organ Click	Round Robin
127	Silence - no sound	

Organ - Percussion

Bank MSB 4

Prg.		
68	Percussion 2	
69	Percussion 2 long	
70	Percussion 3	
71	Percussion 3 long	
72	Organ Click - higher	
127	Silence - no sound	

Perc. Tuned Instr. Bank MSB 5

Prg.	
0	Music Box
1	Music Box octave delay
2	Music Box octave delay - soft Attack
3	Vibraphone
4	Vibraphone short Release
5	Vibraphone soft Attack
6	Vibraphone no Vibrato
7	Vibraphone no Vibrato shot Release
8	Vibraphone fast Tremolo
9	Celeste
10	Tinkle
11	Marimba
12	Marimba octave delay
13	Marimba & Xylophone
14	Xylophone
15	Xylophone octave delay
16	Tubular Bell
17	Tubular Bell 2
18	Timpani
19	Kalimba
20	Cortales
21	Steel drums
22	Alpin Bells Hit
23	Alpin Bells Roll
24	Alpin Bells Hit & Roll
25	Bells
127	Silence - no sound

String Instr. Bank MSB 6

Prg.	
0	Harpsichord
1	Harpsichord & Octave
2	Clavinet 1
3	Clavinet 2
4	Zither
5	Dulcimer 3 strings
6	Dulcimer 3 strings+
7	Dulcimer 3 strings Tremolo
8	Dulcimer 3 strings bowed
9	Dulcimer 5 strings
10	Dulcimer 5 strings+
11	Dulcimer 5 strings Tremolo
12	Dulcimer 5 strings bowed
13	Harp
14	Harp long
127	Silence - no sound

Guitar Bank MSB 7

Prg.	
00	Guitar Nylon
01	Guitar Nylon soft
02	Guitar Nylon Octave
03	G. Nylon Slide velo. 116-127
04	Guitar Nylon Harmonics
05	Guitar Steel 1
06	Guitar Steel 1 soft
07	Guitar Steel 1 hard
08	Guitar Steel 1 double
09	Guitar Steel 1 mute
10	Guitar Steel 1 bowed
11	Guitar Steel 2
12	Guitar Steel 2 soft Attack
13	Guitar Steel 3
14	Guitar Steel 3 soft Attack
15	Banjo
16	Banjo Slide velo. 116-127
17	Mandoline Italian
18	Mandoline Ensemble Tremolo
19	Mandoline Ensemble
20	M. Ens. Split velo. 116-127 Split

Guitar Bank MSB 7

Prg.	
21	Git. Jazz 1
22	Git. Jazz 2
23	Git. Jazz & Octave
24	Pedal Steel Vibrato
25	Pedal Steel
26	Pedal Steel bowed
27	P. Steel Slide velo. 116-127
28	Guitar Jazz 3
29	Guitar Jazz 3 Chicken Picking
30	Guitar Jazz 4
31	Guitar Jazz 4 Chicken Picking
32	E-Guitar 1 US clean
33	E-Guitar 1 US mute
34	E-Guitar 2 BR clean HPF
35	E-Guitar 2 BR mute HPF
36	E-Guitar Overdrive
37	E-Guitar Distortion
38	Rhythm Guitar
39	Rhythm Guitar
123	Nylon Guitar Percussion
124	Guitar stroke
125	Guitar noise
126	Guitar ghost note
127	Silence - no sound

Accordion Bank MSB 8

Prg.		Prg.	
00	Harmonica	28	Accordion Super VI - Reed 8
01	Harmonica Slide velo. 116-127	29	Accordion Super VI - Reed 4+8
02	Harmonica Vibrato	30	Accordion Super VI - Reed 88
03	Accordina	31	Accordion Super VI - Reed 4+16
04	Accordion Musette 888	32	Accordion Super VI - Reed 4+88
05	Accordion Musette 888+16	33	Accordion Super VI - Reed 8+16
06	Accordion Musette 4+888	34	Accordion Super VI - Reed 4+8+16
07	Accordion Musette 4+888+16	35	Accordion Super VI - Reed 88+16
08	Accordion Musette Vintage Italian	36	Accordion Super VI - Reed 4+88+16
09	Accordion Vintage Musette VM 888	37	Big Musette
10	Accordion Vintage Musette VM 888+16	38	Accordion 16
11	Accordion Vintage Musette VM 4+888	39	Accordion 8+16
12	Accordion V. Musette VM 4+888+16	40	Accordion 4+8+16
13	Accordion Musette 888 Benelux	41	Accordion 4+16
14	Accordion Musette 888 Germany	42	Accordion 888
15	Accordion Musette 888 Italy Retro	43	Accordion 888+
16	Accordion Musette 888 French	44	Accordion 888++
17	Accordion 88 French	45	Accordion 888+++
18	Accordion 88+16	46	Accordion 8
19	Accordion 4+88	47	Accordion 8+16
20	Accordion 4+88+16	48	Accordion 4+8+16
21	Tango 8+16	49	Accordion 4+8
22	Tango 8+16 Repetition	50	Melodeon 8
23	Accordion Celeste 88 French	51	Melodeon 88 flat
24	Accordion Celeste 88+16	52	Melodeon 88 medium
25	Accordion Celeste 4+88+16	53	Melodeon 88 wide
26	Accordion Celeste VE10 88 French	54	Melodeon 816
27	Accordion Celeste VE10 88+16	55	Melodeon Tradition Austria „Steirische“
		56	Melodeon Tradition Norway „Corona“
		57	Melodeon Tradition Irish „Saturn“
		58	Melodeon Tradition Swiss „Örgeli“
		59	Melodeon Tradition Benelux „Serena“

Accordion Bank MSB 8

Prg.		Prg.	
60	French Retro 88	70	Scan Bass
61	Bandoneon	71	Vic
62	Bug Artist Casotto 8	72	Bass 16
63	Scot Gola 888	73	Bass 8
64	AG 4	74	Bass 4
		75	Bass 2
		76	Bass 8+16
		77	Bass 4+8+16
		78	Artist Chord 2+4
		79	Artist Chord 4+8
		80	Scan Chord
		117	Jew's harp
		118	Elec. Accordion VOX4
		119	Elec. Accordion VOX4
		120	Accordion Bass & Chord
		121	Melodeon Chord
		122	Melodeon Bass
		123	Melodeon Bass Helikon
		124	Accordion Attack noise Curve 3
		125	Accordion Attack noise Curve linear
		126	Accordion Bellow noise
		127	Silence - no sound

Full Strings & Disco Strings Bank MSB 9

Prg.		
00	Full Strings 1 Chamber Emotion	velocity to Attack
01	Full Strings 1 Chamber short	Release shot
02	Full Strings 1 Chamber medium	Release medium
03	Full Strings 1 Chamber long	Release long
04	Full Strings 1 Chamber slow	Slow Attack
05	Full Strings 2 short	Release shot
06	Full Strings 2 medium	Release medium
07	Full Strings 2 long	Release long
08	Full Strings 2 forte	forte only
09	Full Strings 2 piano	piano only
10	Full Strings 3 Emotion	velocity to Attack time
11	Full Strings 3 FAD	layered 4
12	Full Strings 3 slow	slow
13	Full Strings 3	standard
14	Full Strings Tremolo	
15	Full Strings Pizzicato	

Solo Strings Bank MSB 10

Prg.		
6	Celtic Fiddle	
9	Classic Solo Violin	velocity dynamic
16	Classic Solo Viola	velocity dynamic
23	Classic Solo Cello	velocity dynamic
30	Classic Solo Contra Bass	velocity dynamic
127	Silence - no sound	

Synth Strings Bank MSB 11

Prg.	
0	Strings PWM
1	Strings PWM - up
2	Strings PWM - ENV
3	Strings PWM - notch
4	Strings MKS
5	Strings MKS II
6	Strings MKS LP24
7	Strings MKS Rise
8	Strings Retro Solino
9	Stringmaster Retro
10	Strings M12
11	Strings M12
12	Strings M12
13	Strings M12 Notch
14	Strings M12 Notch
15	Strings M12 Notch

Prg.	
23	Analog Strings mono fast
24	Analog Strings mono medium
25	Analog Strings mono slow
33	OB Strings fast
34	OB Strings slow
127	Silence - no sound

Brass Solo

Bank MSB 12

Prg.		
0	Trumpet 1	velo. split 48 - 96
1	Trumpet 1	velo. split 64
2	Trumpet 1	piano only
3	Trumpet 1	mezzo only
4	Trumpet 1	forte only
5	Trumpet 1	velocity zone 116-127 fall
6	Trumpet 1	velocity zone 116-127 goup
7	Trumpet 1	velocity zone 116-127 Slide
8	Trumpet 2 Ivan	
9	Trumpet 2 Ivan	4 velocity split
10	Trumpet 2 Ivan 1/4 note	
11	Trumpet 2 Ivan 1/4 note	4 velocity split
19	Cornet	
20	Cornet	soft
21	Cornet	hard
22	Cornet	portamento Attack
23	Trumpet mute	
24	Trumpet mute AV	Repetition / Auto Variation
25	Flugelhorn	
26	Trombone Vibrato	
27	Trombone	
28	Trombone damper	
31	Tenorhorn Vibrato	
33	Baritone horn Vibrato	
34	Baritone horn staccato	
35	Tuba	
36	Tuba soft	
127	Silence	no sound

Brass Section

Bank MSB 13

Prg.		
0	US Trumpet Section	dynamic split
1	US Trumpet Section forte	forte
2	US Trumpet Section mezzo	mezzo
3	US Trumpet Section fast fall	fast fall
4	US Trumpet Section medium fall	medium fall
5	US Trumpet Section Split	velo. 116-127 fall
6	US Trombone Section	dynamic split
7	US Trombone Section forte	forte
8	US Trombone Section mezzo	mezzo
9	US Trombone Section fast fall	fast fall
10	US Trombone Section medium fall	medium fall
11	US Trombone Section Split	velo. 116-127 fall
12	US Trump. & Trombone Section	dynamic split
13	US Trump. & Trombone Section forte	forte
14	US Trump. & Trombone Section mz	mezzo
127	Silence - no sound	

Classic Brass

Prg.		
20	Horn Ensemble	velocity split
127	Silence - no sound	

Saxophone Bank MSB 15

Prg.			
00	Soprano Sax	dynamic split	
01	Soprano Sax softer	softer zones	
02	Soprano Sax harder	harder zones	
03	Soprano Sax and noise	breath noise	
04	Soprano Sax Slide	velo. 116-127 Slide	
06	Alto Sax	dynamic split	
07	Alto Sax softer	softer zones	
08	Alto Sax harder	harder zones	
09	Alto Sax breath	breath noise	
10	Alto Sax Slide	velo. 116-127 Slide	
11	Tenor Sax	dynamic split	
12	Tenor Sax softer	softer zones	
13	Tenor Sax harder	harder zones	
14	Tenor Sax breath	breath noise	
15	Tenor Sax Slide	velo. 116-127 Slide	
16	Max Jazz Tenor	velo. split 116	Random Key & breath noise
17	Max Jazz Tenor	velo. split 64	Random Key & breath noise
18	Max Jazz Tenor soft	soft only	Random Key & breath noise
19	Max Jazz Tenor	velo. split 96	
20	Max Jazz Tenor Vibrato less delay	velo. split 96	
21	Max Jazz Tenor soft	soft only	breath noise
22	Max Jazz Tenor Slide	velo. 116-127 Slide	Random Key & breath noise
23	Max Jazz Tenor Slide soft	velo. 116-127 Slide	Random Key & breath noise
24	Tenor Sax Funky		
25	Tenor Sax Funky growl		
26	Tenor Sax Funky Split	velo. split 116	
27	Baritone Sax		
28	Sax Section 1		
29	Sax Section 2		
126	Sax Breath Noise only		
127	Silence - no sound		

Winds Bank MSB 16

Prg.		
0	Clarinet	
1	Clarinet soft	
2	Clarinet Slide	velocity zone 116-127 Slide
3	Hugo Clarinet - no loop	
4	Hugo Clarinet Slide	velocity zone 116-127 Slide
5	Clarinet Vito Tradition	
6	Clarinet Vito Tradition	
7	Clarinet Vito Tradition soft	soft velocity 1-97
8	Clarinet Vito Tradition	staccato
9	Clarinet Vito Tradition	staccato
10	Piccolo	
11	Flute	
12	Flute EQ	
13	Flute High Pass Filter	
14	Low Whistle	
15	Panflute	
16	Shakuhachi	
17	Celtic High Whistle	
18	Celtic High Whistle Grace note AV	Auto Grace note
19	C. High Wh. Slide	velocity zone 116-127 Slide
20	Bottle	
21	Bottle Q	
22	Bottle LFO	
23	Whistle	
24	Okarina	
25	Highland Pipers & Drone Ensemble	split note 60 - c1
26	Ullian Piper & Drone	
27	Ullian Piper & Drone Grace note AV	Auto Grace note
28	Ullian Piper & Dr. Slide	velocity zone 116-127 Slide
29	Ullian Drone & Chords	
127	Silence	no sound

Classic Winds Bank MSB 17

Prg.		
0	Classic Flute	
1	Classic Flute	just piano
3	Oboe	
6	English horn	
7	English horn	just piano
9	Classic Clarinet	
10	Classic Clarinet	just piano
12	Bassoon	
15	Bass Clarinet	
17	Flute Ensemble	
127	Silence	no sound

Choir

Prg.		
00	Classic Choir Aah	
01	Classic Choir Aah	Filter
04	Choir Pop Ooh	
05	Choir Pop Ooh	Filter
20	Girls Ooh	
127	Silence - no sound	

Bass Bank MSB 19

Prg.		
00	E-Bass 1	
01	E-Bass 1 & Note-off	
02	E-Bass 1 Slide	velocity zone 116-127 Slide
03	E-Bass 2	
04	E-Bass 2 & Note-off	
05	E-Bass 3	
06	E-Bass 3 Slide	velocity zone 116-127 Slide
10	E-Bass 6 Picking 2	
11	E-Bass 6 Picking 2 & Note-off	
12	E-Bass 7	
13	E-Bass 7	Repetition
14	E-Bass 7 & Note-off	Repetition
15	E-Bass Fretless	
16	E-Bass Slap 1	
17	E-Bass Slap 1 & Note-off	
18	E-Bass Slap 2	
19	E-Bass Slap 2 & Note-off	
20	Upright Jazz Bass	Random
21	Upright Jazz Bass & Note-off	Random
22	Upright Jazz Bass	velocity split at 96 & 105
23	Upright Jazz Bass & Note-off	velocity split at 96 & 105
24	Upright Jazz Bass	velocity split 120
25	Upright Jazz Bass & Note-off	velocity split 120
26	Upright Jazz Bass	no finger Attack
34	Bowed Upright Bass	
127	Silence	no sound

Synthesizer

Bank MSB 20

Prg.	
0	Bells & Pad
1	Digital Pad
2	OBX & Wavebell
3	DX1 Toy
4	Star Theme
5	Brightness
6	OB & Noise
7	Atmos
8	Brass Comp
9	Brass Rex
10	Polysynth Classic
11	Halo Pad
12	Caliope
13	Charang
14	Fairly Space
15	Echo Drop
16	VF Vox
17	Bass & Lead
18	Fantasia
19	Bowed Glass
20	Soft Pad
21	Ice Rain
22	Goblin
23	SoundTrack
24	Atmosguitar
25	Bottle soft
26	Polysynth Classic 5th
27	SquareLead
28	P5Brass
29	Saw

Prg.	
30	SawEnv
31	C-Lead
32	SoloVox
33	MetalPad
34	JunoSweep
35	Vangbrass
36	Crystal
37	FM8
38	Mo55
39	DXBell
40	OBS1
41	OBSOft
42	Hook
43	FMPluk
44	FMBrazz
45	Ice
46	BoHook
47	VPhrase
48	VP1
49	Grace
50	Noise
51	Digirace
52	Shinner
53	Pad-A
54	Vibro
55	Digisi
56	Alex
57	VZBell
58	VZ1
59	Mizoo

Synthesizer

Bank MSB 20

Prg.	
60	Bellko
61	Bellz
62	AnalogOB
63	M3Osc
64	M12Brass
65	M12Brass ENV
66	OBLead
67	OBArp
68	OBell
69	OBBrass
70	Mach1
71	Brazza
72	Brasso
73	T8SuperBrass
74	T8SuperBrass ENV
75	Dells
76	Pulse
77	Pulso
78	PWD24
79	Xypho
80	Charpo
81	Jippo
82	JXArp
83	Bamarimba
84	JCO10
85	JXBell
86	StabBrass
87	Clouds
88	BellHit HP Filter
89	OBNoise
90	Noise down
91	Voxo (Notch filter 12)
92	APad Notch (Notch filter 12)
93	PWD (Notch filter 12)
94	MOSC (Notch filter 12)

Prg.	
95	Square (Band pass filter 24)
96	OXB (Band pass filter 24)
97	Hook (Band pass filter 24)
98	Pulso (Band pass filter 24)
99	Jops (Band pass filter 12)
100	Filter (Band pass filter 24)
101	PolyS (Band pass filter 24)
102	OBLead (Band pass filter 24)
103	JXBell (Notch Filter 24)
104	Barimbo (Band pass filter 24)
105	Arpp (Band pass filter 24)
106	Bottle (High pass filter 12)
107	Jells (Band pass filter 24)
108	Poly (High pass filter 24)
109	Mogo (High pass filter 24)
110	HBells (High pass filter 24)
111	HBelly (High pass filter 6)
112	HBrass (High pass filter 24)
113	ClassicPoly (High pass filter 12)
114	Harppo (High pass filter 24)
115	Hipps (High pass filter 6)

Syn. Bass

Bank MSB 20

Prg.	
116	Classic Synth Bass
117	Classic Synth Bass Rezo
118	JBass 1
119	JBass 2
120	JBass 3
121	JBass soft
122	CS Classic Bass
123	MoBass
124	MoBass ENV
125	XBass 1
126	XBass 2
127	Silence

FX & Percussion

Bank MSB 21

Prg.		
00	Orchestra Hit Major	
01	Orchestra Hit Minor	
62	Synth FX down	
63	Synth FX up	
64	Drum Kit	Map Drum Kit 0 playable on MIDI channels 1-9-11-16
65	Percussion Kit	Map Drum Kit 56 playable on MIDI channels 1-9-11-16
66	Classic Percussion	Map Drum Kit 48 playable on MIDI channels 1-9-11-16
127	Silence - no sound	

Drum Kit (Channel 10)

ACOUSTIC STANDARD	
0	Standard
1	Pop 1
2	Pop 2
3	Hit
4	Vintage
5	Rock
6	Tradition Buzzer Snare
7	Latin
ROOM & OVERHEAD	
8	Standard
9	Pop 1
10	Pop 2
11	Studio
12	Vintage
13	Rock
14	Hit 1
15	Hit 2
POWER KITS	
16	Rock 1
17	Rock 2
18	Rock 3
19	Rock 4
ELECTRONIC & DANCE	
24	Dance
25	Electric
26	808/909
27	808
28	606
29	Dance
30	Dance
31	House

ACOUSTIC JAZZ	
32	Light
33	Medium
34	Radio King
35	Open
DRUM KITS - ACOUSTIC BRUSH	
40	Medium 1
41	Medium 2
DRUM KITS - ACOUSTIC BRUSH	
48	Classic Percussion
49	Concert Band
DRUM KITS - Specials	
56	Latin Percussion
DRUM KITS - Groups	
60	Acoustic Bass Drum + Partial
61	Electronic Bass Drum + Partial
62	Techno & E-Bass Drum + Partial
63	Acoustic Snare + 6 Articulations
64	Electronic Snare Drum + RimSh.
65	Electr. Claps Cymbals Percussion FX
66	Acoustic Cymbals + Hi-hat



2ND DRUM KIT

After power on the drum kits are only available on parts with active DRUM MODE. The default MIDI channel for this is MIDI channel 10. You can also set a second part to DRUM MODE with a System Exclusive command.

	Nr.	Prg. 0 Standard Kit	Prg. 1 Standard Kit	Prg. 2 Standard Kit	Prg. 3 Standard Kit	Prg. 4 Standard Kit	Prg. 5 Standard Kit	Prg. 6 Standard Kit	Prg. 7 Standard Kit		Nr.	Prg. 0 - 7
G	7	Dance Kick	~	~	~	~	~	~	Snare QA Latin	E	64	Conga low [Repetition]
	8	Dance Kick	~	~	~	~	~	~	Snare QA Latin	F	65	Timbale high [Repetition]
A	9	Dance Kick	~	~	~	~	~	~	Snare QA Latin		66	Timbale low [Repetition]
	10	Dance Kick	~	~	~	~	~	~	Snare QA Latin	G	67	Agogo high [Repetition]
	11	Dance Kick	~	~	~	~	~	~	Snare QA Latin		68	Agogo low [Repetition]
C	12	Dance Kick	~	~	~	~	~	~	Snare QA Latin	A	69	Cabasa [Repetition]
	13	Surdo Mute	~	~	~	~	~	~	~		70	Maracas [Repetition]
D	14	Surdo Open	~	~	~	~	~	~	~		71	Whistle
	15	Hi Q	~	~	~	~	~	~	~	C	72	Whistle
E	16	Whipe Slap	~	~	~	~	~	~	~		73	Guiro short
F	17	Scratch	~	~	~	~	~	~	~	D	74	Guiro long
	18	Scratch	~	~	~	~	~	~	~		75	Claves
G	19	Finger Snap	~	~	~	~	~	~	~	E	76	Woodblock low
	20	Click Noise	~	~	~	~	~	~	~	F	77	Woodblock hi
A	21	Metronom Click	~	~	~	~	~	~	~		78	Cuica mute
	22	Metronom Bell	~	~	~	~	~	~	~	G	79	Cuica open
	23	Seq. Click	~	~	~	~	~	~	~		80	Triangle mute (5)
C	24	Seq. Click	~	~	~	~	~	~	~	A	81	Triangle open (5)
	25	Brush Tap	~	~	~	~	~	~	~		82	Shaker
D	26	Brush Swirl	~	~	~	~	~	~	~		83	Jingle Bell
	27	Brush Slap	~	~	~	~	~	~	~	C	84	Chimes
E	28	Brush Tap Swirl	~	~	~	~	~	~	~		85	Tamburin Hit 1
F	29	Snare Roll	~	~	~	~	~	~	~	D	86	Tamburin Hit 2
	30	Castagnet	~	~	~	~	~	~	~		87	Tamburin Hit 3
G	31	Snare soft LS Cravio.	Snare soft EZ GMS Piccolo	Snare soft EZ Roge.	Snare soft LS Bronze	Snare soft QA 5.5 Radio King	Snare soft LS SG	Snare soft CR	Snare soft QA Latin	E	88	Tamburin Hit 4
	32	Sticks	~	Sticks	~	~	~	~	~	F	89	E-Snare
A	33	Bass Drum LS Ludw.	Bass Drum EZGMS 2	Bass Drum EZ GMS	Bass Drum LS Studio	Bass Drum QA MAS	Bass Drum AD LL	Bass Drum Modern 1	Bass Drum QA Latin		90	E-Snare
	34	Snare Var. LS Cravio.	Snare Var. EZ GMS Piccolo	Snare Var. EZ Roge.	Snare Var. LS Bronze	Snare Var. QA 5.5 Radio King	Snare Var. LS SG	Snare Var. CR	Snare Var. QA Latin	G	91	E-Snare
	35	Bass Drum LS Ludw.	Bass Drum EZ GMS 2	Bass Drum EZ GMS	Bass Drum LS Studio	Bass Drum QA MAS	Bass Drum AD LL	Bass Drum Modern 2	Bass Drum QA Latin		92	E-Snare
C	36	Bass Drum LS Ludw.	Bass Drum EZ GMS 2	Bass Drum EZ GMS	Bass Drum LS Studio	Bass Drum QA MAS	Bass Drum AD LL	Bass Drum Modern 3	Bass Drum QA Latin	A	93	E-Snare
	37	Sidestick LS Cravio.	Sidestick EZB Piccolo	Sidestick EZ Roge.	Sidestick LS Bronze	Sidestick QA 5.5 Radio King	Sidestick LS SG	Sidestick CR	Sidestick QA Latin		94	E-Snare
D	38	Snare LS Cravio.	Snare EZB Piccolo	Snare EZ Roge	Snare LS Bronze	Snare QA 5.5 Radio King	Snare LS SG	Snare CR	Snare QA Latin		95	E-Snare
	39	Clap	~	~	~	~	~	~	~	C	96	E-Snare
E	40	Snare Rimshot LS Cravio.	Snare Rimshot EZB Piccolo	Snare Rimshot EZ Roge.	Snare Rimshot LS Bronze	Snare RS QA 5.5 Radio King	Snare Rimshot LS SG	Snare Rimshot CR	Snare Rimshot QA Latin		97	E-Snare
F	41	Tom Low Low EZ GMS	~	~	~	~	~	~	~	D	98	E-Snare
	42	HiHat closed (0)	~	~	~	~	~	~	~		99	E-Snare
G	43	Tom Low EZ GMS	~	~	~	~	~	~	~	E	100	E-Snare
	44	HiHat Pedal (0)	~	~	~	~	~	~	~	F	101	E-Snare
A	45	Tom Medium L. EZ GMS	~	~	~	~	~	~	~		102	E-Snare
	46	HiHat open (0)	~	~	~	~	~	~	~	G	103	E-Snare
	47	Tom Medium EZ GMS	~	~	~	~	~	~	~		104	E-Claps
C	48	Tom High EZ GMS	~	~	~	~	~	~	~	A	105	E-Claps
	49	Crash Cymbal 1	~	~	~	~	~	~	~		106	E-Claps
D	50	Tom High High EZ GMS	~	~	~	~	~	~	~		107	E-Claps
	51	Ride Cymbal 1 [Repetition]	~	~	~	~	~	~	~	C	108	E-Claps
E	52	China Cymbal	~	~	~	~	~	~	~		109	Claps Hit 1
F	53	Ride Cup	~	~	~	~	~	~	~	D	110	Claps Hit 2
	54	Tambourin [Repetition]	~	~	~	~	~	~	~		111	Claps Hit 3
G	55	Splash Cymbal	~	~	~	~	~	~	~	E	112	Claps Hit 4
	56	Cowbell	~	~	~	~	~	~	~	F	113	Stomp 1
A	57	Crash Cymbal 2	~	~	~	~	~	~	~		114	Stomp 2
	58	Vibraslap	~	~	~	~	~	~	~	G	115	Stomp 3
	59	Ride Cymbal 2 [Repetition]	~	~	~	~	~	~	~		116	Reverse Stomp
C	60	Bongo high [Repetition]	~	~	~	~	~	~	~	A	117	Reverse Snare
	61	Bongo low [Repetition]	~	~	~	~	~	~	~		118	Reverse Clap
D	62	Conga mute [Repetition]	~	~	~	~	~	~	~		119	Reverse BD
	63	Conga open [Repetition]	~	~	~	~	~	~	~	C	120	HiHat Open 1/2
											121	Cym. Crash NL
										D	122	Cym. Ride NL
											123	Cym. Cup NL
										E	124	Cym. Splash NL
											125	Reverse Cym.

	Nr.	Prg. 8 Overhead Kit	Prg. 9 Overhead Kit	Prg. 10 Overhead Kit	Prg. 11 Overhead Kit	Prg. 12 Overhead Kit	Prg. 13 Overhead Kit	Prg. 14 Overhead Kit	Prg. 15 Overhead Kit		Nr.	Prg. 8 - 15
G	7	Dance Kick	~	~	~	~	~	~	~	E	64	Conga low [Repetition]
	8	Dance Kick	~	~	~	~	~	~	~	F	65	Timbale high [Repetition]
A	9	Dance Kick	~	~	~	~	~	~	~		66	Timbale low [Repetition]
	10	Dance Kick	~	~	~	~	~	~	~	G	67	Agogo high [Repetition]
	11	Dance Kick	~	~	~	~	~	~	~		68	Agogo low [Repetition]
C	12	Dance Kick	~	~	~	~	~	~	~	A	69	Cabasa [Repetition]
	13	Surdo Mute	~	~	~	~	~	~	~		70	Maracas [Repetition]
D	14	Surdo Open	~	~	~	~	~	~	~		71	Whistle
	15	Hi Q	~	~	~	~	~	~	~	C	72	Whistle
E	16	Whipe Slap	~	~	~	~	~	~	~		73	Guiro short
F	17	Scratch	~	~	~	~	~	~	~	D	74	Guiro long
	18	Scratch	~	~	~	~	~	~	~		75	Claves
G	19	Finger Snap	~	~	~	~	~	~	~	E	76	Woodblock low
	20	Click Noise	~	~	~	~	~	~	~	F	77	Woodblock hi
A	21	Metronom Click	~	~	~	~	~	~	~		78	Cuica mute
	22	Metronom Bell	~	~	~	~	~	~	~	G	79	Cuica open
	23	Seq. Click	~	~	~	~	~	~	~		80	Triangle mute (5)
C	24	Seq. Click	~	~	~	~	~	~	~	A	81	Triangle open (5)
	25	Brush Tap	~	~	~	~	~	~	~		82	Shaker
D	26	Brush Swirl	~	~	~	~	~	~	~		83	Jingle Bell
	27	Brush Slap	~	~	~	~	~	~	~	C	84	Chimes
E	28	Brush Tap Swirl	~	~	~	~	~	~	~		85	Tamburin Hit 1
F	29	Snare Roll	~	~	~	~	~	~	~	D	86	Tamburin Hit 2
	30	Castagnet	~	~	~	~	~	~	~		87	Tamburin Hit 3
G	31	Snare soft QA 12x15 WFL	Snare soft QA 4x14SW	Snare soft QA 4x15 Ludw.	Snare soft QA 5x14 Leedy	Snare soft QA 5x14 Ludwig	Snare soft QA 6.5x14 Lud.	Snare soft QA Black Beauty	Snare soft QA 7x14 Radio K.	E	88	Tamburin Hit 4
	32	Sticks	~	~	~	~	~	~	~	F	89	E-Snare
A	33	Bass Drum EZ GMS	Bass Drum EZ GMS 2	Bass Drum LS Ludw.	Bass Drum AD LL	Bass Drum QA Latin	Bass Drum AD Tam.	Bass Drum LS IC	Bass Drum LS Studio		90	E-Snare
	34	Snare Var. QA 12x15 WFL	Snare Var. QA 4x14SW	Snare Var. QA 4x15 Ludw.	Snare Var. QA 5x14 Leedy	Snare Var. QA 5x14 Ludw.	Snare Var. QA 6.5x14 Lud.	Snare Var. QA Black Beauty	Snare Var. QA 7x14 Radio K.	G	91	E-Snare
	35	Bass Drum EZ GMS	Bass Drum EZ GMS 2	Bass Drum LS Ludw.	Bass Drum AD LL	Bass Drum QA Latin	Bass Drum AD Tam.	Bass Drum LS IC	Bass Drum LS Studio		92	E-Snare
C	36	Bass Drum EZ GMS	Bass Drum EZ GMS 2	Bass Drum LS Ludw.	Bass Drum AD LL	Bass Drum QA Latin	Bass Drum AD Tam.	Bass Drum LS IC	Bass Drum LS Studio	A	93	E-Snare
	37	Sidestick QA 12x15 WFL	Sidestick QA 4x14SW	Sidestick QA 4x15 Ludw.	Sidestick QA 5x14 Leedy	Sidestick QA 5x14 Ludw.	Sidestick QA 6.5x14 Lud.	Sidestick QA Black Beauty	Sidestick QA 7x14 Radio K.		94	E-Snare
D	38	Snare QA 12x15 WFL	Snare QA 4x14SW	Snare QA 4x15 Ludw.	Snare QA 5x14 Leedy	Snare QA 5x14 Ludw.	Snare QA 6.5x14 Lud.	Snare QA Black Beauty	Snare QA 7x14 Radio K.		95	E-Snare
	39	Clap	~	~	~	~	~	~	~	C	96	E-Snare
E	40	Snare RS QA 12x15 WFL	Snare Rimshot QA 4x14SW	Snare RS QA 4x15 Ludw.	Snare RS QA 5x14 Leedy	Snare RS QA 5x14 Ludw.	Snare RS QA 6.5x14 Lud.	Snare RS QA Black Beauty	Snare RS QA 7x14 Radio K.		97	E-Snare
F	41	Tom Low EZ GMS Overhead	~	~	~	~	~	~	~	D	98	E-Snare
	42	HiHat closed (0)	~	~	~	~	~	~	~		99	E-Snare
G	43	Tom Low EZ GMS Overhead	~	~	~	~	~	~	~	E	100	E-Snare
	44	HiHat Pedal (0)	~	~	~	~	~	~	~	F	101	E-Snare
A	45	Tom M. L. EZ GMS Overhead	~	~	~	~	~	~	~		102	E-Snare
	46	HiHat open (0)	~	~	~	~	~	~	~	G	103	E-Snare
	47	Tom M. EZ GMS Overhead	~	~	~	~	~	~	~		104	E-Claps
C	48	Tom High EZ GMS Overhead	~	~	~	~	~	~	~	A	105	E-Claps
	49	Crash Cymbal 1	~	~	~	~	~	~	~		106	E-Claps
D	50	Tom High High EZ GMS Ov.	~	~	~	~	~	~	~		107	E-Claps
	51	Ride Cymbal 1 [Repetition]	~	~	~	~	~	~	~	C	108	E-Claps
E	52	China Cymbal	~	~	~	~	~	~	~		109	Claps Hit 1
F	53	Ride Cup	~	~	~	~	~	~	~	D	110	Claps Hit 2
	54	Tambourin [Repetition]	~	~	~	~	~	~	~		111	Claps Hit 3
G	55	Splash Cymbal	~	~	~	~	~	~	~	E	112	Claps Hit 4
	56	Cowbell	~	~	~	~	~	~	~	F	113	Stomp 1
A	57	Crash Cymbal 2	~	~	~	~	~	~	~		114	Stomp 2
	58	Vibraslap	~	~	~	~	~	~	~	G	115	Stomp 3
	59	Ride Cymbal 2 [Repetition]	~	~	~	~	~	~	~		116	Reverse Stomp
C	60	Bongo high [Repetition]	~	~	~	~	~	~	~	A	117	Reverse Snare
	61	Bongo low [Repetition]	~	~	~	~	~	~	~		118	Reverse Clap
D	62	Conga mute [Repetition]	~	~	~	~	~	~	~		119	Reverse BD
	63	Conga open [Repetition]	~	~	~	~	~	~	~	C	120	HiHat Open 1/2
											121	Cym. Crash NL
										D	122	Cym. Ride NL
											123	Cym. Cup NL
										E	124	Cym. Splash NL
											125	Reverse Cym.

	Nr.	Prg. 16 Power Kit	Prg. 17 Power Kit	Prg. 18 Power Kit	Prg. 19 Power Kit
G	7	Dance Kick	~	~	~
	8	Dance Kick	~	~	~
A	9	Dance Kick	~	~	~
	10	Dance Kick	~	~	~
	11	Dance Kick	~	~	~
C	12	Dance Kick	~	~	~
	13	Surdo Mute	~	~	~
D	14	Surdo Open	~	~	~
	15	Hi Q	~	~	~
E	16	Whipe Slap	~	~	~
F	17	Scratch	~	~	~
	18	Scratch	~	~	~
G	19	Finger Snap	~	~	~
	20	Click Noise	~	~	~
A	21	Metronom Click	~	~	~
	22	Metronom Bell	~	~	~
	23	Seq. Click	~	~	~
C	24	Seq. Click	~	~	~
	25	Brush Tap	~	~	~
D	26	Brush Swirl	~	~	~
	27	Brush Slap	~	~	~
E	28	Brush Tap Swirl	~	~	~
F	29	Snare Roll	~	~	~
	30	Castagnet	~	~	~
G	31	Snare soft AD Sono	Snare soft LS Ludw.	Snare soft QA Gadd Power	Snare soft QA Gadd Power
	32	Sticks	~	~	~
A	33	Bass Drum AD Tama	Bass Drum QA Gadd	Bass Drum LS Ludwig	Bass Drum AD LL
	34	Snare Var. AD Sonor	Snare Var. LS Ludw.	Snare Var. QA Gadd Power	Snare Var. QA Gadd Power
	35	Bass Drum AD Tama	Bass Drum QA Gadd	Bass Drum LS Ludwig	Bass Drum AD LL
C	36	Bass Drum AD Tama	Bass Drum QA Gadd	Bass Drum LS Ludwig	Bass Drum AD LL
	37	Sidestick AD Sono	Sidestick LS Ludw.	Sidestick QA Gadd Power	Sidestick QA Gadd Power
D	38	Snare AD Sono	Snare LS Ludw.	Snare QA Gadd Power	Snare QA Gadd Power
	39	Clap	~	~	~
E	40	Snare Rimshot AD Sono	Snare Rimshot LS Ludw.	Snare RS QA Gadd Power	Snare RS QA Gadd Power
F	41	Tom Low SG	~	~	~
	42	HiHat closed (0)	~	~	~
G	43	Tom Low SG	~	~	~
	44	HiHat Pedal (0)	~	~	~
A	45	Tom M. L. SG	~	~	~
	46	HiHat open (0)	~	~	~
	47	Tom M. SG	~	~	~
C	48	Tom High SG	~	~	~
	49	Crash Cymbal 1	~	~	~
D	50	Tom High High SG	~	~	~
	51	Ride Cymbal 1 [Repetition]	~	~	~
E	52	China Cymbal	~	~	~
F	53	Ride Cup	~	~	~
	54	Tambourin [Repetition]	~	~	~
G	55	Splash Cymbal	~	~	~
	56	Cowbell Rock	Cowbell Rock	Cowbell Rock	Cowbell Rock
A	57	Crash Cymbal 2	~	~	~
	58	Vibraslap	~	~	~
	59	Ride Cymbal 2 [Repetition]	~	~	~
C	60	Bongo high [Repetition]	~	~	~
	61	Bongo low [Repetition]	~	~	~
D	62	Conga mute [Repetition]	~	~	~
	63	Conga open [Repetition]	~	~	~

	Nr.	Prg. 16 - 19
E	64	Conga low [Repetition]
F	65	Timbale high [Repetition]
	66	Timbale low [Repetition]
G	67	Agogo high [Repetition]
	68	Agogo low [Repetition]
A	69	Cabasa [Repetition]
	70	Maracas [Repetition]
	71	Whistle
C	72	Whistle
	73	Guero short
D	74	Guero long
	75	Claves
E	76	Woodblock low
F	77	Woodblock hi
	78	Cuica mute
G	79	Cuica open
	80	Triangle mute (5)
A	81	Triangle open (5)
	82	Shaker
	83	Jingle Bell
C	84	Chimes
	85	Tamburin Hit 1
D	86	Tamburin Hit 2
	87	Tamburin Hit 3
E	88	Tamburin Hit 4
F	89	E-Snare
	90	E-Snare
G	91	E-Snare
	92	E-Snare
A	93	E-Snare
	94	E-Snare
	95	E-Snare
C	96	E-Snare
	97	E-Snare
D	98	E-Snare
	99	E-Snare
E	100	E-Snare
F	101	E-Snare
	102	E-Snare
G	103	E-Snare
	104	E-Claps
A	105	E-Claps
	106	E-Claps
	107	E-Claps
C	108	E-Claps
	109	Claps Hit 1
D	110	Claps Hit 2
	111	Claps Hit 3
E	112	Claps Hit 4
F	113	Stomp 1
	114	Stomp 2
G	115	Stomp 3
	116	Reverse Stomp
A	117	Reverse Snare
	118	Reverse Clap
	119	Reverse BD
C	120	HiHat Open 1/2
	121	Cym. Crash NL
D	122	Cym. Ride NL
	123	Cym. Cup NL
E	124	Cym. Splash NL
	125	Reverse Cym.

	Nr.	Prg. 24 Dance Kit	Prg. 25 Electro Kit	Prg. 26 808/909 Kit	Prg. 27 909 Kit	Prg. 28 Analog Kit	Prg. 29 Dance Kit	Prg. 30 Dance Kit	Prg. 31 House Kit		Nr.	Prg. 24 - 31
G	7	E-Kick	~	~	~	~	~	~	~	E	64	E-Conga low
	8	E-Kick	~	~	~	~	~	~	~	F	65	E-Timbale high
A	9	E-Kick	~	~	~	~	~	~	~		66	E-Timbale low
	10	E-Kick	~	~	~	~	~	~	~	G	67	E-Agogo high
	11	E-Kick	~	~	~	~	~	~	~		68	E-Agogo low
C	12	E-Kick	~	~	~	~	~	~	~	A	69	E-Cabasa
	13	E-Kick	~	~	~	~	~	~	~		70	E-Maracas
D	14	E-Kick	~	~	~	~	~	~	~		71	E-Whistle
	15	Hi Q	~	~	~	~	~	~	~	C	72	E-Whistle
E	16	Whipe Slap	~	~	~	~	~	~	~		73	E-Guiro short
F	17	Scratch	~	~	~	~	~	~	~	D	74	E-Guiro long
	18	Scratch	~	~	~	~	~	~	~		75	E-Claves
G	19	Finger Snap	~	~	~	~	~	~	~	E	76	E-Woodblock low
	20	Click Noise	~	~	~	~	~	~	~	F	77	E-Woodblock hi
A	21	Metronom Click	~	~	~	~	~	~	~		78	E-Cuica mute
	22	Metronom Bell	~	~	~	~	~	~	~	G	79	E-Cuica open
	23	Seq. Click	~	~	~	~	~	~	~		80	E-Triangle mute
C	24	Seq. Click	~	~	~	~	~	~	~	A	81	E-Triangle open
	25	E-Kick	~	~	~	~	~	~	~		82	E-Shaker
D	26	E-Kick	~	~	~	~	~	~	~		83	E-Jingle Bell
	27	E-Kick	~	~	~	~	~	~	~	C	84	E-Chimes
E	28	E-Kick	~	~	~	~	~	~	~		85	Tamburin Hit 1
F	29	E-Kick	~	~	~	~	~	~	~	D	86	Tamburin Hit 2
	30	E-Kick	~	~	~	~	~	~	~		87	Tamburin Hit 3
G	31	Elec Snare	~	~	~	~	~	~	~	E	88	Tamburin Hit 4
	32	E-Kick	~	~	~	~	~	~	~	F	89	E-Snare
A	33	E-Kick	~	~	~	~	~	~	~		90	E-Snare
	34	Elec Snare	~	~	~	~	~	~	~	G	91	E-Snare
	35	Dance BD	Elec BD	909 BD	909 BD	606 BD	Dance BD	Dance BD	Dance BD		92	E-Snare
C	36	Dance BD	Elec BD	808 BD	909 BD	80 BD	Dance BD	Dance BD	Dance BD	A	93	E-Snare
	37	Rim 808	Rim 808	808 Rim	909 Rim	606 Rim	909 Rim	909 Rim	909 Rim		94	E-Snare
D	38	Elec Snare 1	Elec Snare	808 Snare	909 Snare	Snare 80	Dance Snare	Dance Snare	Dance Snare		95	E-Snare
	39	Clap 808	Clap 808	Clap 808	Clap 808	Clap 80	Hit Clap	Hit Clap	Hit Clap	C	96	E-Snare
E	40	Elec Snare 2	Elec Snare 2	909 Snare	909 Snare	Snare 85	Dance Snare	Dance Snare	Dance Snare		97	E-Snare
F	41	Elec Tom 909	Elec Tom 80 Lin.	808 Tom	909 Tom	Tom 85	909 Tom	909 Tom	909 Tom	D	98	E-Snare
	42	HH 909	HH elec	808 HHat cl.	909 HHat cl.	HHat cl. 85	909 HHat cl.	909 HHat cl.	909 HHat cl.		99	E-Snare
G	43	Elec Tom 909	Elec Tom 80 Lin.	808 Tom	909 Tom	Tom 85	909 Tom	909 Tom	909 Tom	E	100	E-Snare
	44	HH 909	HH elec	808 HHat P.	909 HHat P.	HHat cl. 85	909 HHat e.	909 HHat e.	909 HHat e.	F	101	E-Snare
A	45	Elec Tom 909	Elec Tom 80 Lin.	808 Tom	909 Tom	Tom 85	909 Tom	909 Tom	909 Tom		102	E-Snare
	46	HH 909	HH elec	808 HH. op.	909 HH. op.	HHat cl. 85	909 HH. op.	909 HH. op.	909 HH. op.	G	103	E-Snare
	47	Elec Tom 909	Elec Tom 80 Lin.	808 Tom	909 Tom	Tom 85	909 Tom	909 Tom	909 Tom		104	E-Claps
C	48	Elec Tom 909	Elec Tom 80 Lin.	808 Tom	909 Tom	Tom 85	909 Tom	909 Tom	909 Tom	A	105	E-Claps
	49	E-Crash 909	Crash 909	808 Cym	909 Cym	808 Cym	808 Cym	808 Cym	808 Cym		106	E-Claps
D	50	Elec Tom 909	Elec Tom 80 Lin.	808 Tom	90 Tom	Tom 85	90 Tom	90 Tom	90 Tom		107	E-Claps
	51	E-Ride 909	~	~	~	~	~	~	~	C	108	E-Claps
E	52	E-China	~	~	~	~	~	~	~		109	E-Claps
F	53	E-Cup 66	~	~	~	~	~	~	~	D	110	E-Claps
	54	E-Tamb. 77	~	~	~	~	~	~	~		111	E-Claps
G	55	E-Splash Cymbal	~	~	~	~	~	~	~	E	112	E-Claps
	56	E-Cowbell	~	~	~	~	~	~	~	F	113	E-Claps
A	57	E-Crash Cymbal 2	~	~	~	~	~	~	~		114	E-Claps
	58	E-Vibraslap	~	~	~	~	~	~	~	G	115	E-Claps
	59	E-Ride Cymbal 2	~	~	~	~	~	~	~		116	E-Claps
C	60	E-Bongo high	~	~	~	~	~	~	~	A	117	E-Claps
	61	E-Bongo low	~	~	~	~	~	~	~		118	E-Claps
D	62	E-Conga mute	~	~	~	~	~	~	~		119	E-Claps
	63	E-Conga open	~	~	~	~	~	~	~	C	120	E-Claps
											121	Cym. Crash NL
										D	122	Cym. Ride NL
											123	Cym. Cup NL
										E	124	Cym. Splash NL
											125	Reverse Cym.

	Nr.	Prg. 32 Jazz Kit	Prg. 33 Jazz Kit	Prg. 34 Jazz Kit	Prg. 35 Jazz Kit
G	7	Dance Kick	~	~	~
	8	Dance Kick	~	~	~
A	9	Dance Kick	~	~	~
	10	Dance Kick	~	~	~
	11	Dance Kick	~	~	~
C	12	Dance Kick	~	~	~
	13	Surdo Mute	~	~	~
D	14	Surdo Open	~	~	~
	15	Hi Q	~	~	~
E	16	Whipe Slap	~	~	~
F	17	Scratch	~	~	~
	18	Scratch	~	~	~
G	19	Finger Snap	~	~	~
	20	Click Noise	~	~	~
A	21	Metronom Click	~	~	~
	22	Metronom Bell	~	~	~
	23	Seq. Click	~	~	~
C	24	Seq. Click	~	~	~
	25	Brush Tap	~	~	~
D	26	Brush Swirl	~	~	~
	27	Brush Slap	~	~	~
E	28	Brush Tap Swirl	~	~	~
F	29	Snare Roll	~	~	~
	30	Castagnet	~	~	~
G	31	Snare soft LS Ludw.	Snare soft Monti.	Snare soft QA Vintage	Snare soft 714 Slinger
	32	Sticks	~	~	~
A	33	Bass Drum AD Prem.	Bass Drum Yam.	Bass Drum LS Ludw.	Bass Drum GMS open
	34	Snare Var. LS Ludw.	Snare Var. Monti.	Snare Var. QA Vintage	Snare Var. 714 Slinger
	35	Bass Drum AD Prem.	Bass Drum Yam.	Bass Drum LS Ludw.	Bass Drum GMS open
C	36	Bass Drum AD Prem.	Bass Drum Yam.	Bass Drum LS Ludw.	Bass Drum GMS open
	37	Sidestick LS Ludw.	Sidestick Monti.	Sidestick QA Vintage	Sidestick 714 Slinger
D	38	Snare LS Ludw.	Snare Monti.	Snare QA Vintage	Snare 714 Slinger
	39	Clap	~	~	~
E	40	Snare Rimshot LS Ludw.	Snare Rimshot Monti.	Snare Rimshot QA Vintage	Snare Rimshot 714 Slinger
F	41	Tom Low Low Jazz	~	~	~
	42	HiHat closed (0)	~	~	~
G	43	Tom Low Jazz	~	~	~
	44	HiHat Pedal (0)	~	~	~
A	45	Tom Medium L. Jazz	~	~	~
	46	HiHat open (0)	~	~	~
	47	Tom Medium EZ Jazz	~	~	~
C	48	Tom High Jazz	~	~	~
	49	Crash Cymbal 1	~	~	~
D	50	Tom High High Jazz	~	~	~
	51	Ride Cymbal 1 [Repetition]	~	~	~
E	52	China Cymbal	~	~	~
F	53	Ride Cup	~	~	~
	54	Tambourin [Repetition]	~	~	~
G	55	Splash Cymbal	~	~	~
	56	Cowbell	~	~	~
A	57	Crash Cymbal 2	~	~	~
	58	Vibraslap	~	~	~
	59	Ride Cymbal 2 [Repetition]	~	~	~
C	60	Bongo high [Repetition]	~	~	~
	61	Bongo low [Repetition]	~	~	~
D	62	Conga mute [Repetition]	~	~	~
	63	Conga open [Repetition]	~	~	~

	Nr.	Prg. 40 Brush Kit	Prg. 41 Brush Kit
G	7	Snare Brush LS Monti.	Snare Brush LS Monti.
	8	Snare Brush LS Monti.	Snare Brush LS Monti.
A	9	Snare Brush LS Monti.	Snare Brush LS Monti.
	10	Snare Brush LS Monti.	Snare Brush LS Monti.
	11	Snare Brush LS Monti.	Snare Brush LS Monti.
C	12	Snare Brush LS Monti.	Snare Brush LS Monti.
	13	Surdo Mute	~
D	14	Surdo Open	~
	15	Hi Q	~
E	16	Whipe Slap	~
F	17	Scratch	~
	18	Scratch	~
G	19	Finger Snap	~
	20	Click Noise	~
A	21	Metronom Click	~
	22	Metronom Bell	~
	23	Seq. Click	~
C	24	Seq. Click	~
	25	Snare Brush LS Monti.	Snare Brush LS Monti.
D	26	Snare Brush LS Monti.	Snare Brush LS Monti.
	27	Snare Brush LS Monti.	Snare Brush LS Monti.
E	28	Snare Brush LS Monti.	Snare Brush LS Monti.
F	29	Snare Brush LS Monti.	Snare Brush LS Monti.
	30	Snare Brush LS Monti.	Snare Brush LS Monti.
G	31	Snare Brush LS Monti.	Snare Brush LS Monti.
	32	Sticks	~
A	33	Bass Drum AD Prem.	Bass Drum Yam.
	34	Snare Var. Brush LS Monti.	Snare Var. Brush LS Monti.
	35	Bass Drum AD Prem.	Bass Drum Yam.
C	36	Bass Drum AD Prem.	Bass Drum Yam.
	37	Sidestick Brush LS Monti.	Sidestick Brush LS Monti.
D	38	Snare Brush LS Monti.	Snare Brush LS Monti.
	39	Snare Brush LS Monti.	~
E	40	Snare Brush LS Monti.	Snare RS Brush LS Monti.
F	41	Tom Low Low Brush	~
	42	HiHat closed (0)	~
G	43	Tom Low Brush	~
	44	HiHat Pedal (0)	~
A	45	Tom Medium Brush	~
	46	HiHat open (0)	~
	47	Tom Medium Brush	~
C	48	Tom High Brush	~
	49	Brush Crash Cymbal 1	~
D	50	Tom High High Brush	~
	51	Brush Ride Cymbal 1 [Repe.]	~
E	52	China Cymbal	~
F	53	Brush Ride Cup	~
	54	Tambourin [Repetition]	~
G	55	Splash Cymbal	~
	56	Cowbell	~
A	57	Brush Crash Cymbal 2	~
	58	Vibraslap	~
	59	Brush Ride Cymbal 2 [Repe.]	~
C	60	Bongo high [Repetition]	~
	61	Bongo low [Repetition]	~
D	62	Conga mute [Repetition]	~
	63	Conga open [Repetition]	~

	Nr.	Prg. 32-41
E	64	Conga low [Repetition]
F	65	Timbale high [Repetition]
	66	Timbale low [Repetition]
G	67	Agogo high [Repetition]
	68	Agogo low [Repetition]
A	69	Cabasa [Repetition]
	70	Maracas [Repetition]
	71	Whistle
C	72	Whistle
	73	Guiro short
D	74	Guiro long
	75	Claves
E	76	Woodblock low
F	77	Woodblock hi
	78	Cuica mute
G	79	Cuica open
	80	Triangle mute(5)
A	81	Triangle open(5)
	82	Shaker
	83	Jingle Bell
C	84	Chimes
	85	Tamburin Hit 1
D	86	Tamburin Hit 2
	87	Tamburin Hit 3
E	88	Tamburin Hit 4
F	89	E-Snare
	90	E-Snare
G	91	E-Snare
	92	E-Snare
A	93	E-Snare
	94	E-Snare
	95	E-Snare
C	96	E-Snare
	97	E-Snare
D	98	E-Snare
	99	E-Snare
E	100	E-Snare
F	101	E-Snare
	102	E-Snare
G	103	E-Snare
	104	E-Claps
A	105	E-Claps
	106	E-Claps
	107	E-Claps
C	108	E-Claps
	109	Claps Hit 1
D	110	Claps Hit 2
	111	Claps Hit 3
E	112	Claps Hit 4
F	113	Stomp 1
	114	Stomp 2
G	115	Stomp 3
	116	Reverse Stomp
A	117	Reverse Snare
	118	Reverse Clap
	119	Reverse BD
C	120	HiHat Open 1/2
	121	Cym. Crash NL
D	122	Cym. Ride NL
	123	Cym. Cup NL
E	124	Cym. Splash NL
	125	Reverse Cym.

	Nr.	Prg. 48 Orchestra
G	7	-
	8	Gran Casa
A	9	Gran Casa
	10	Gran Casa
	11	Gran Casa
C	12	Gran Casa
	13	Gran Casa
D	14	Gran Casa
	15	Gran Casa
E	16	Gran Casa
F	17	Gran Casa
	18	GC. forte
G	19	GC. medium
	20	GC. piano
A	21	-
	22	-
	23	Gong
C	24	-
	25	-
D	26	-
	27	Closed HH
E	28	Pedal Ped.
F	29	Open HH.
	30	Ride Cymbal
G	31	Ride Cymbal
	32	-
A	33	-
	34	-
	35	Gran Casa
C	36	Gran Casa
	37	-
D	38	Concert Sn.
	39	Castanets
E	40	Concert Sn.
F	41	Timpani
	42	Timpani
G	43	Timpani
	44	Timpani
A	45	Timpani
	46	Timpani
	47	Timpani
C	48	Timpani
	49	Timpani
D	50	Timpani
	51	Timpani
E	52	Timpani
F	53	Timpani
	54	Tamburin
G	55	Concert Cy.
	56	Concert Cy.
A	57	Concert Cy.
	58	Concert Cy.
	59	Concert Cy.
C	60	Concert Cy.
	61	Concert Cy.
D	62	Concert Cy.
	63	Concert Cy.

	Nr.	
E	64	Concert Cy.
F	65	Concert Cy.
	66	Cymbal Roll
G	67	Castanet 1
	68	Castanet 2
A	69	Castanet Roll
	70	-
	71	-
C	72	Triangle op.
	73	Triangle mute
D	74	Triangle roll
	75	-
E	76	-
F	77	Wind. dwn.
	78	Wind. up
G	79	-
	80	-
A	81	Tambourin
	82	Tambourin
	83	Tambourin Roll
C	84	-
	85	-
D	86	-
	87	-
E	88	Applaus
F	89	C. Snare pp
	90	C. Snare p
G	91	C. Snare mp
	92	C. Snare mf
A	93	C. Snare f
	94	C. Snare ff
	95	C. Snare pp
C	96	C. Snare p
	97	C. Snare mp
D	98	C. Snare mf
	99	C. Snare f
E	100	C. Snare ff
F	101	Snare Roll p
	102	Snare Roll p
G	103	Snare Roll m
	104	Snare Roll m
A	105	Snare Roll f
	106	Snare Roll f
	107	Snare Ro.dyn
C	108	Snare Ro.dyn
	109	Snare Ro.dyn
D	110	Snare Ro.dyn
	111	Snare Ro.dyn
E	112	Snare Ro.dyn
F	113	Opera Gong
	114	Opera Gong
G	115	Opera Gong
	116	Opera Gong
A	117	Opera Gong
	118	Opera Gong
	119	Opera Gong
C	120	Opera Gong
	121	Opera Gong
D	122	Opera Gong
	123	Opera Gong
E	124	Intro Tune

	Nr.	Prg. 49 Concert Ba.
G	7	-
	8	-
A	9	-
	10	-
	11	-
C	12	-
	13	-
D	14	-
	15	-
E	16	-
F	17	-
	18	-
G	19	-
	20	Snare 3
A	21	Snare 4
	22	Snare 5
	23	Snare 6
C	24	Snare 7
	25	Snare 8
D	26	Snare 9
	27	Snare brush 1
E	28	Snare brush 2
F	29	Snare brush 3
	30	Bass drum
G	31	Bass drum
	32	Bass drum
A	33	Bass drum
	34	Bass drum
	35	Bass drum
C	36	Bass drum
	37	Rim
D	38	Snare 1 - velosp.
	39	Claps
E	40	Snare 2 - velosp.
F	41	Tom LL
	42	Hi hat closed
G	43	Tom L
	44	Hi hat pedal
A	45	Tom M
	46	Hi hat open
	47	Tom MH
C	48	Tom H
	49	Crash
D	50	Tom H
	51	Ride
E	52	Crash
F	53	Ride cup
	54	Tambourin
G	55	Splash
	56	Cowbell
A	57	Crash
	58	Vibraslap
	59	Ride
C	60	Timpani C
	61	Timpani Cis
D	62	Timpani D
	63	Timpani Es

	Nr.	
E	64	Timpani E
F	65	Timpani F
	66	Timpani Fis
G	67	Timpani G
	68	Timpani As
A	69	Timpani A
	70	Timpani Bb
	71	Timpani H
C	72	Timpani C
	73	Timpani Cis
D	74	Gran Casa
	75	Gran Casa
E	76	Gran Casa
F	77	Gran Casa
	78	Gran Casa
G	79	Gran Casa
	80	Gran Casa
A	81	Gran Casa open
	82	Gran Casa 2
	83	Gran Casa stop
C	84	Gran Casa 2
	85	Gran Casa & Cymbal
D	86	Gran Casa 3
	87	Gran Casa open
E	88	Concert Cy.
F	89	Concert Cy.
	90	Concert Cy.
G	91	Concert Cy. open
	92	Concert Cy. 1/2a
A	93	Concert Cy. 1/2b
	94	Concert Sn.
	95	Concert Sn.
C	96	Concert Sn. 1.
	97	Concert Sn. 2.
D	98	Concert Sn. 3.
	99	Concert Sn. 4.
E	100	Concert Sn. Rim 1.
F	101	Concert Sn. Rim 2.
	102	Concert Sn. Rim 3.
G	103	Concert Sn. Rim 4.
	104	Concert Sn. Rim
A	105	Concert Sn. Flam
	106	Concert Sn. Flam
	107	Concert Sn. Flam
C	108	Concert Sn. Roll 1
	109	Concert Sn. 2 Acc.
D	110	Concert Sn. soft
	111	Concert Sn. Roll 1
	112	Concert Sn. Roll 2 Acc.
	113	Concert Sn. Roll 3

	Nr.	Prg. 56 Latin Percus.
G	7	-
	8	-
A	9	-
	10	-
	11	-
C	12	
	13	Cajon Low
D	14	Cajon Slap
	15	Cajon Tip
E	16	Claves High
F	17	Claves Low
	18	Claps
G	19	-
	20	Finger Snap
A	21	Castanet
	22	Conga High
	23	Conga High
C	24	Conga High
	25	Conga Mute
D	26	Conga Mute
	27	Conga Mute
E	28	Conga Mute
F	29	Conga Low
	30	Conga Low
G	31	Conga Low
	32	Conga Mute
A	33	Conga Mute
	34	Conga Mute
	35	Conga Mute
C	36	Bongo High
	37	Bongo High
D	38	Bongo High
	39	Bongo High Mute
E	40	Bongo High Mute
F	41	Bongo High Mute
	42	Bongo Low
G	43	Bongo Low
	44	Bongo Low
A	45	Bongo Low Mute
	46	Bongo Low Mute
	47	Bongo Low Mute
C	48	Timbale
	49	-
D	50	-
	51	-
E	52	-
F	53	-
	54	Timbale
G	55	-
	56	-
A	57	-
	58	-
	59	-
C	60	Cowbell
	61	Cowbell
D	62	Cowbell
	63	Cowbell

	Nr.	
E	64	Guiro
F	65	Guiro
	66	Guiro
G	67	Guiro
	68	Tambourine
A	69	Tambourine
	70	Tambourine
	71	Tambourine
C	72	Maracas
	73	Shaker
D	74	Cabasa
	75	Cuica
E	76	Cuica
F	77	Cowbell
	78	Cowbell
G	79	Shekere
	80	Shekere Tone
A	81	Triangle Mute
	82	Triangle
	83	-
C	84	-
	85	-
D	86	-
	87	-
E	88	-
F	89	-
	90	-
G	91	-
	92	-
A	93	-
	94	-
	95	-
C	96	-
	97	-
D	98	-
	99	-
E	100	-
F	101	-
	102	-
G	103	-
	104	-
A	105	-
	106	-
	107	-
C	108	-
	109	-
D	110	-
	111	-
E	112	-
F	113	-
	114	-
G	115	-
	116	-
A	117	-
	118	-
	119	-
C	120	-
	121	-
D	122	-
	123	-
E	124	-

	Nr.	Prg. 58 Voice Kit
G	7	-
	8	-
A	9	-
	10	-
	11	-
C	12	-
	13	-
D	14	-
	15	-
E	16	-
F	17	Breath 1
	18	Breath 2
G	19	Finger Snaps
	20	Male Count: 'One'
A	21	Male Count: 'Two'
	22	Male Count: 'Three'
	23	Male Count: 'Four'
C	24	Male Count: 'a'
	25	Female Count: 'One'
D	26	Female Count: 'Two'
	27	Female Count: 'Three'
E	28	Female Count: 'Four'
F	29	Female Count: 'a'
	30	Vocal Bass Drum 3
G	31	Vocal Snare 4
	32	Vocal Rim Shot
A	33	Vocal Bass Drum 2
	34	Vocal Snare 3
	35	Vocal Bass Drum 1
C	36	Vocal Bass Drum
	37	Vocal Cross Stick
D	38	Vocal Snare 1
	39	Vocal Clap
E	40	Vocal Snare 2
F	41	Vocal Floor Tom
	42	Vocal Closed Hi Hat
G	43	Vocal Low Tom
	44	Vocal Pedal Hi Hat
A	45	Vocal Mid Tom 2
	46	Vocal Open Hi Hat
	47	Vocal Mid Tom 1
C	48	Vocal Hi Tom 2
	49	Vocal Crash Cymbal
D	50	Vocal High Tom 1
	51	Vocal Ride Cymbal
E	52	Male Ad Lib 1
F	53	Male Ad Lib 2
	54	Male Ad Lib 3
G	55	Male Ad Lib 4
	56	Male Ad Lib 5
A	57	Male Ad Lib 6
	58	Vibra Slap
	59	Male: 'Hmm Hmm
C	60	Female: 'Next'
	61	Female: 'Here We Go'
D	62	Female: 'Play With Acc.'
	63	Female: 'Manual Play'

	Nr.	
E	64	Female: 'Better L- Next Time!'
F	65	Female: 'Please Pr. Any Pads'
	66	Female: 'Go'
G	67	Female: 'Ouch'
	68	Female: 'Uh Oh'
A	69	Female: 'Chuckle'
	70	Female: 'Oh Yeah'
	71	Female: 'Yep'
C	72	Female: 'Fantastic! New..
	73	-
D	74	-
	75	-
E	76	-
F	77	-
	78	Vocal Cuica High
G	79	Vocal Cuica Low
	80	Male 'All Right'
A	81	Male 'Get Down'
	82	Male 'Chicka'
	83	Male 'Ku-Chi-Ka'
C	84	Male 'Everybody Come..
	85	Male 'Huh'
D	86	Male 'That's Good!'
	87	Male 'Ow!'
E	88	Male 'Yeah!'
F	89	Male 'Ah'
	90	Male 'That's Bad'
G	91	Male 'Hit The Note'
	92	-
A	93	-

Bass Drum Acoustic only (LPF)

Drum Kit 60

Note No.	Sound	Size	Layer	Genre	
1	BD Pork Pie	24" x 18"	all	Heavy	universal
2			medium		
3			soft		
4	BD Pork Pie		all	Power	saturation + compr.
5			medium		
6			soft		
7	BD Pork Pie		all	Rock	transient + brighther
8			medium		
9			soft		
10	BD L&L	22" x 14"	all	Power	saturation
11			medium		
12			soft		
13	BD L&L		all	Metal	bright
14			medium		
15			soft		
16	Bass Drum Ludwig	22" x 18"	all	Metal	universal
17			medium		
18			soft		
19	Bass Drum Premier 1	18" x 14"	all	Jazz	more overhead
20			medium		
21			soft		
22	Bass Drum Premier 1	18" x 14"	all	Jazz	front microphone
23			medium		
24			soft		
25	Bass Drum Ludwig Blue	26" x 14"	all	Vintage	universal
26			medium		
27			soft		
28	Bass Drum DW Coll.	20" x 16"	all	Prog	low resonance
29			medium		
30			soft		
31	Bass Drum Sonor Des	24" x 18"	all	StudioPop	transient
32			medium		
33			soft		

Bass Drum Acoustic only (LPF)

Drum Kit 60

Note No.	Sound	Size	Layer	Genre	
34	Bass Drum Tama Art St.	24" x 18"	all	Rock	universal
35			medium		
36			soft		
37	Bass Drum Tama Art St.	24" x 18"	all	Rock	universal
38			medium		
39			soft		
40	Bass Drum Gretsch RB	22" x 14"	all	Acoustic	universal
41			medium		
42			soft		
43	Bass Drum DW&Woofers	22" x 20"	all	Acoustic	+ attack
44			medium		
45			soft		
46	Bass Drum Yamaha	15" x 24"	DI	Jazz	direct - overh. - room
47			DI+OH		
48			OH		
49	BD Pork Pie & Sub Layer			Rock	Sub & attack layer
50	BD Pork Pie & Sub Layer			Rock	Sub & attack layer
51	Bass Drum Yamaha	22" x 14"	all	Soul	universal
52	Bass Drum	Partial	one	Partial	Sub only
61-78	Attack Partial	Read Page 68 - find the same sounds from Kit. 62			
127	Silence - no sound		127	Silence - no sound	

velocity split	all	medium	soft
1 hardest	1	3	6
2	2		
3	3		
4	4		
5	5		
6	6		
7	7	7	7
8	8	8	8
9	9	9	9
10	10	10	10
11	11	11	11
12	12		12
13 softest	13		13

Bass Drum Electronic (LPF)

Drum Kit 61

Note No.	Sound	Genre	
1	Bass Drum Electronic	Dance	
2		Dance	
3		Dance	
4		Dance	
5		Dance	
6		Dance	
7		Acid	
8		Dance	
9		Dance	
10		Dance	
11	Bass Drum Electronic	Dance	Sub
12	Bass Drum Electronic	Dance	Sub
13	Bass Drum 808		short
14	Bass Drum 808		short/long velocity (no dyn)
15	Vintage unit		
16	Vintage unit		
17	909		
18	909		
19	909		
20	909 BPF 12	Filter	BPF 12
21	909 BPF 24	Filter	BPF 24
22	909 LPF 24 standard	Filter	LPF 24 standard
23	SDS		
24	SDS		
25	SDS		
26	Dance Hifi		
27	Dance Hifi		
28	copy EBD no. 1	Filter	BPF
29	copy EBD no. 2	Filter	HPF
30	copy EBD no. 3	Filter	HPF
61-78	Attack Partial	Read Page 68 - find the same sounds from Kit. 62	
127	silence - no sound		

Bass Drum Techno (LPF)

Drum Kit 62

Note No.	Sound	Genre	Filter
1-5	Bass Drum	Techno	LPF24
6-10	Bass Drum	Techno House	LPF24
11	Bass Drum	Minimal Techno	BPF24
12-15	Bass Drum	Minimal Techno	LPF24
16-19	Bass Drum	Dark Techno	LPF24
20	Bass Drum	Dark Techno	BPF24
21-25	Bass Drum	Melodic Techno	LPF24
26-27	Bass Drum	House	LPF24
28	Bass Drum	House	BPF24
29-30	Bass Drum	House	LPF24
31-35	Bass Drum	Industrial	LPF24
34	Bass Drum	Industrial	BPF24
35	Bass Drum	Industrial	LPF24
36-38	HipHop	HipHop	

Bass Drum Partial - Attack only

Drum Kit 62

Note No.	Sound	Filter
61	Dance Attack	LPF
62	808 Attack	HPF
63	808 Distortion Attack	LPF
64	808 Attack	HPF
65	808 Attack	LPF
66	808 Attack	LPF
67	CR78 Attack	LPF
68	CR78 Attack	LPF
69	Hard Attack	LPF
70	Dance Attack bright	LPF

Note No.	Sound	Filter
71	Techno Attack	LPF
72	Techno Attack	LPF
73	BD Attack Acoustic	LPF
74	BD Attack Acoustic	LPF
75	Attack Dance	LPF
76	Attack Dance	LPF
77	Attack Dance	LPF
78	Attack Dance	LPF
127	silence - no sound	

The Bass Drum attack sounds numbers 61-74, are developed to layer them with any Bass Drum sound. Make the Bass Drum attack more visible with such a layered sound.

Snare Drum Acoustic Drum Kit 63

N.No.	Sound	Size	Articul.	Genre	Mix	Filter
1	Pearl Piccolo	10"x4"	Rimshot	Pop	EQ & Compressor	HPF
2			Open Hit			HPF
3			Shallow RS			HPF
4			Cross Stick			HPF
5			Shallow Hit			HPF
6-10	DW Piccolo	12"x4"	-"-	Pop	direct	HPF
11-15	Pearl Piccolo	13"x4"	-"-	Pop	direct & overhead	HPF
16-20	Ludwig Acrolite	14x5"	-"-	Jazz	direct	HPF
21-25	Trojan	14x5"	-"-	Jazz	direct & overhead	HPF
26-30	Zildjian Alloy	14x5"	-"-	Rock	direct	HPF
31-35	Ludwig Cooper	14x5"	-"-	Studio	direct	HPF
36-40	Sonor Designer	14x5"	-"-	Rock	direct & overhead	HPF
41-45	Montineri	14x5"	-"-	Pop	direct & overhead	HPF
46-50	Ayotte	14x5,5"	-"-	Rock	direct & overhead	HPF
51-55	Ludwig Supra. 402	14x6,5"	-"-	80th GATE	direct & overhead	HPF
56-60	Pearl Signature	14x6,5"	-"-	Rock	direct	LPF
61-65	Ludwig BB	14x6,5"	-"-	Pop	direct & overhead	HPF
66-70	Craviotto Custom	14x7"	-"-	Acoustic	direct & overhead	HPF

Snare Drum - Click (LPF) Drum Kit 63

N.No.	Sound	Size	Articul.	Genre	Mix	Filter
90	Snare Click	6,5"	1		Round Robin	LPF
91	Snare Click	5"	1		Round Robin	LPF
92	Snare Click Cooper	5"	1		Round Robin	LPF
93	Snare Click Ferrone	6,5"	1		Round Robin	LPF
94	Snare Click Piccolo	4"	1		Round Robin	LPF
95	Snare Click Caxia	6"	1		Round Robin	LPF
96	Snare Click DW	5"	3		Round Robin	LPF
97	Snare Click Massoff	5"	3		Round Robin	LPF
98	Snare Click Sonor	6,5"	3		Round Robin	LPF
99	Snare Click Tama	8"	3		Round Robin	LPF
100	Snare Click Tama Low	8"	3		Round Robin	LPF
101	Snare Click Trojan	5,5"	3		Round Robin	LPF

Snare Drum - Partial Buzzer (LPF) Drum Kit 63

N.No.	Sound	Size	Articul.	Genre	Mix	Filter
102	Buzzer noise 1		1		Round Robin	HPF
103	Buzzer noise 2		1		Round Robin	HPF
104	Buzzer noise 3		1		Round Robin	HPF
105	Buzzer noise 4		1		Round Robin	HPF
106	Buzzer noise 1 - 2		1		Round Robin	HPF
107	Buzzer noise 1 - 2 - 3		1		Round Robin	HPF
108	Buzzer noise DW		1		Round Robin	HPF
109	Buzzer noise Massoff		2		Round Robin	HPF
110	Buzzer noise Sonor		3		Round Robin	HPF
111	Buzzer noise Tama		2		Round Robin	HPF
112	Buzzer noise Tama		3		Round Robin	HPF
113	Buzzer noise Troyan		4		Round Robin	HPF
114	Brush stroke				Round Robin	HPF
125	Snare Stick Count 1					HPF
126	Snare Stick Count 2					HPF
127	silence - no sound					

Buzzer noise

The „Buzzer noise“ samples only make sense in connection with the LINK function in our app. You layer this sound with a snare or bass drum.

Snare Electronic

Drum Kit 64

No.	Sound	Genre	Variation	Note	Filter
1-17	E-Snare	Dance		velocity crossover	HPF6
18	E-Snare	Dance		velocity crossover	BPF24
19-32	E-Snare	Dance		velocity crossover	HPF6
	The snare sounds 1-32 are newly constructed sounds. Two selected snare samples are mixed with velocity cross over. The sounds come from a selection of all the following electronic snare samples.				
33-37	E-Snare	Techno			LPF24Res
38-42	E-Snare	Techno House			LPF24Res
43-47	E-Snare	Minimal Techno			LPF24Res
48-52	E-Snare	Dark Techno			LPF24Res
53-57	E-Snare	Melodic Techno			LPF24Res
58-62	E-Snare	House			LPF24Res
63-67	E-Snare	Industrial			LPF24Res
68	E-Snare 808		velocity split 1 2 3		LPF6
69	E-Snare 808		velocity split 1 2 3		BPF
70	E-Snare 808		tone 1		LPF6
71	E-Snare CR78a		tone 1		LPF6
72	E-Snare CR78a		tone 6 accent		LPF6
73-75	E-Snare	Hip Hop			LPF6
76-77	E-Snare	House			LPF6

Snare Electronic Rimshot

Drum Kit 64

No.	Sound	Filter	
78	CR78 Rimshot	LPF6	
79	TR808 Rimshot	LPF6	
80	MT400V Rimshot	LPF6	
81	808 Rimshot	LPF6	
82	909 Rimshot	LPF6	
83	909 Rimshot	LPF6	
84	909 Rimshot	LPF6	
85-91	Vintage Drum RimShot	LPF6	
92	Rimshot LP24 Reso	LP24 Reso	
93	Rimshot BPF 24	BPF 24	
94-113	Vintage Drum RimShot	LPF6	
126	Cross Stick	LPF6	
127	silence - no sound		

Claps Electronic (Notch Filter) Drum Kit 65

Grp.	Sound		
1	Claps Electronic 808		
2	Claps Electronic 808		
3	Claps Electronic 808	BPF	
4	Claps Electronic CR		
5	Claps Electronic CR		
6	Claps Electronic CR	BPF	
7-13	Claps Electronic Vintage		

Percussion Electronic (Notch) Drum Kit 65

Grp.	Sound	
27	Percussion 808	Claves
28		Cowbell
29		Maracas
30-31	Percussion CR78	Bongo
32		Conga
33-34		Cowbell
35-36		Guiro
37		Guiro short
38		Maracas
39-41		Metal
42-44		Tambourine

Cymbals Electronic (Notch Filter) Drum Kit 65

No.	Sound	
14	Cymbal Electronic 808a	
15	Cymbal CR78	
16-26	Cymbal Electronic Vintage	

FX Electronic (Notch Filter) Drum Kit 65

Grp.	Sound
45-116	FX Electronic
126	silence - no sound

Cymbal

Drum Kit 66

No.	Sound		
1	Paiste	20"	Crash
2		20"	Tip
3		20"	mute
4	Paiste	18"	Crash
5		18"	Tip
6		18"	mute
7	Trad. Thin	17"	Crash
8		17"	Tip
9		17"	mute
10	Paiste	16"	Crash
11		16"	Tip
12			mute
13	Trad. Thin	14"	Crash
14		14"	Tip
15			mute
16	Splash	12"	med. to hard
17	Splash	10"	soft to hard
18	Splash	6"	-
19	China Thin	20"	med. to hard
			mute
21	China	19"	med. to hard
			mute
23	China Thin	18"	med. to hard
			mute
25	China Thin	16"	medium
			mute

No.	Sound		
48	Earth Ride	22"	Bell s-h
49		22"	Tip in
50		22"	Tip out
51		22"	Edge
52			mute
53	Rock Ride	21"	Bell
54		21"	Tip
55		21"	Edge
56			mute

Hi-hat Acoustic

Drum Kit 66

Note		Articulation		
84	Sabian Studio	Open	100%	Bow
85		Open	75%	Bow
86		Open	50%	Bow
87		Open	25%	Bow
88		Closed		Bow
89		Tight closed		Bow
90		Open	100%	Edge
91		Open	75%	Edge
92		Open	50%	Edge
93		Open	25%	Edge
94		Closed		Edge
95		Tight closed		Edge
96		Pedal Chick		
97		Pedal Splash		
98		Closed Bell		
99		Open Bell		
100				mute

V3SOUND - MIDI IMPLEMENTATION

	Recognized
Basic Default	1 - 16
Mode	3 poly mode
Messages	
Note number	* 12-109
Velocity Note ON	9nH ₁ v=1-127 o
Note OFF	9nH ₁ v=0 x
Key aftertouch	o
Channel aftertouch	o
Pitch Bend	0-12
Bank Select	00
Controller	01 - Modulation
	05 - Portamento time
	06 - Data Entry
	07 - Volume
	10 - Panorama
	11 - Expression
	64 - Sustain
	65 - Portamento
	66 - Sostenuito
	71 - Filter resonance
	72 - ENVELOPE Release
	73 - ENVELOPE Attack
	74 - Filter cutoff
	75 - ENVELOPE Decay
	76 - Vibrato rate
	77 - Vibrato depth
	78 - Vibrato delay

	84 - Portamento control	
	91 - Reverb send	
	93 - Chorus send	
	120 - All sound off	
	121 - Reset all controllers	
	123 - All note off	
	126 - Mono-mode	
	127 - Poly-mode	
RPN 0000H	BnH 65H 00H 64H 00H 06H vv	Pitch bend sensitive in semitone (default=2)
RPN 0001H Fine tune in cent	BnH 65H 00H 64H 01H 06H vv	vv=00 -100 vv=40H 0 vv=7FH +100
RPN 0002H Coarse tune half tone	BnH 65H 00H 64H 02H 06H vv	vv=00 -64 vv=40H 0 vv=7FH +64
NRPN 18rrH	BnH 63H 18H 62H rr 06H vv	Pitch coarse of perc. rr in semitone (vv=40H->no modif)
NRPN 1ArH	BnH 63H 1AH 62H rr 06H vv	Level of perc. sound rr (vv=00 to 7FH)
NRPN 1CrH	BnH 63H 1CH 62H rr 06H vv	Pan of perc. sound rr (40H = middle)
NRPN 1DrH	BnH 63H 1DH 62H rr 06H vv	Reverb send level of perc rr (vv=00 to 7FH)
AUX AUDIO OUT	BnH 63H 38H 62H rr 06H vv	rr = MIDI channel - CH1 = 00 CH2 = 01 vv = 0 MAIN 127=AUX
(Reverb return is fixed in Main out)		Example :Set CH1 to AUX - send 3 MIDI controllers: For all parts with MIDI-channel 1 cc99 value 56 + cc98 value 00 + cc06 value 127 * depends on sound board
Program Change :	0-127	
System Exclusive:		
SYSEX	F0H 7EH 7FH 09H 01H F7H	General MIDI Reset
SYSEX	F0H 7FH 7FH 04H 01H 00H II F7H	Master volume (II=0 to 127, default 127)
SYSEX DSP1	F0h,41h,00h,42h,12h,40h,7Fh,7Fh,xxh,00h,F7h xxh=Effect 00h=HALL1 01h=HALL2 02h=ROOM1 03h=ROOM2 04h=ROOM3" 05h=PLATE1 06h=PLATE2 07h=PLATE3 08h=CHORUS 09h=FLANGE 0Ah=DELAY1 0Bh=DELAY2 0Ch=CHORUS/ROOM1 0Dh=CHORUS/ROOM2 0Eh=VOCCANCEL 0Fh=ROTARY SPEAKER	
SYSEX DSP2	F0h,41h,00h,42h,12h,40h,01h,38h,xxh,00h,F7h	xxh=Effect 0h=CHORUS 1 01h=CHORUS 2 02h=CHORUS 3 03h=CHORUS 4 04h=FEEDBACK 05h=FLANGER 06h=SHORT DELAY 07h=FB DELAY

www.v3sound.com